

Perceptions™ Room Darkening Sheers

LEVOLOR®

Technical Guide

Effective September 2026

Table of Contents

Overview

How to Place an Order	3
How to Measure	4
Critical Dimensions	5-6
Light Control Index	6
Finish Index	7
Cleaning Guide	7

Product Guide

Features and Benefits	8
Options and Upgrades	8-9
Vane Count and Stacking Chart	10
Exploded View - Cordless Wand Control	11
Warranty	See levolor.com for warranty information

How to Place an Order

STEP 1 General Shade Information
Color Number
Color Description

STEP 2 Stack Options
One Way, Right or Left
Dual Stack
Center Stack

STEP 3 Options and Upgrades
The following options may be available. See individual price page information for detailed availability.
Cordless Wand Control
Valance Upgrade
Extension Brackets

STEP 4 Mount Type and Shade Measurement
See page 4 for measurement instructions.
Inside or Outside Mount
WIDTH first, then HEIGHT


STEP 5 Quantity of Shades Being Ordered

STEP 6 Delivery Information
Indicate ship to address

STEP 7 Purchase Order Number

How to Measure


NOTE: Smallest unit of measure is 1/8". Shades installed on windows near wall or baseboard heaters must clear the heaters by 12" above and 6" to the side.

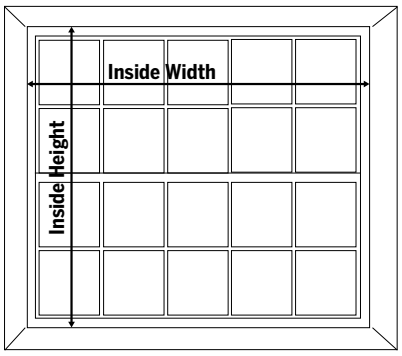

Inside Mount (IM) Installation - Patio Doors and Windows

To find width: Measure the opening across the top where the headrail is to be installed from inside of window frame on left to inside of window frame on right. Round the measurement down to the nearest 1/8". A minimum depth of 2 7/8" is needed to install inside the patio door or window.

To find height: Measure from the inside top of the opening on the left, at the center, and on the right to the sill; round the measurement down to the nearest 1/8" and note the smallest dimension. Do not make any allowances: the factory will make all adjustments so the headrail will fit the opening properly and the vanes will clear the sill by 1/4" to 1/2".

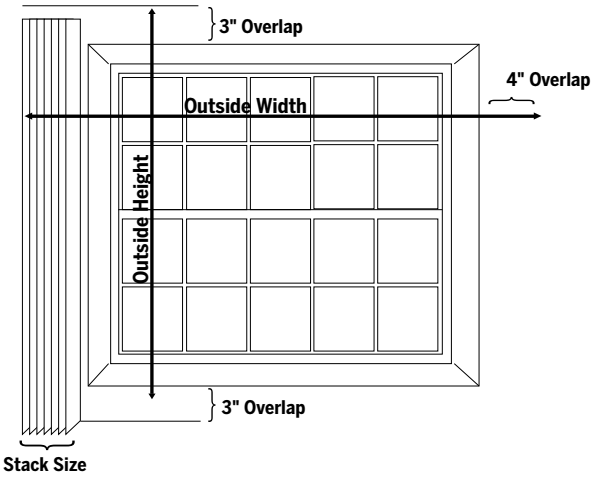

Outside Mount (OM) Installation - Windows

To find width: Measure the width of the area to be covered at the place where the headrail will be installed to the nearest 1/8". Shade should overlap opening at least 4" on each side to ensure privacy. To maintain the maximum view, allow adequate overlap, and consider the stack width. To calculate stack dimensions, consult the Vane Count and Stacking Chart on page 11.


To find height: Measure the height of the area to be covered and round down to the nearest 1/8". Shade should extend at least 3" above and 3" below opening or window frame. For installations ceiling to the floor, make adequate allowance for carpeting. Specifying OM measurement means the factory makes no allowances.

Outside Mount (OM) Installation - Patio Doors

To find width: Measure the width of the area to be covered at the place where the headrail will be installed to the nearest 1/8". Shade should overlap opening at least 4" on each side to ensure privacy. To ensure easy access through the door and allow adequate overlap, consider the stack width. To calculate stack dimensions, consult the Vane Count and Stacking Chart on page 11.

To find height: Measure the height of the area to be covered and round down to the nearest 1/8". Shade should extend at least 3" above opening or window frame. For installations ceiling to the floor, deduct 1/2" for proper clearance. Specifying OM measurement means the factory makes no allowances.

NOTE: Outside Mount installation with required overlaps on top and side of window/door will minimize light gaps and provide better room darkening for Perceptions™ Room Darkening Sheers compared to inside mount option.

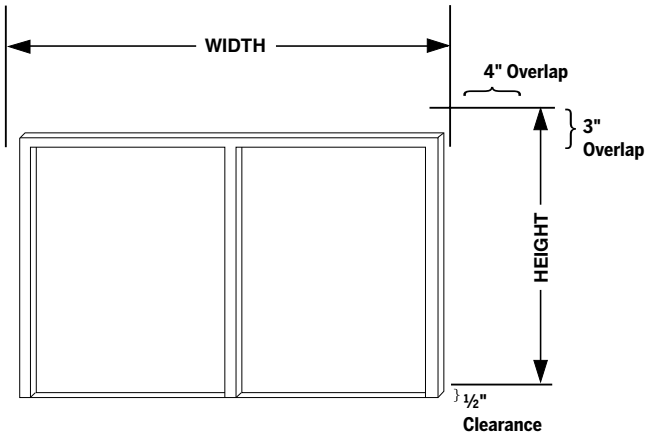

Extension Brackets - Extends from 2" to 4"

Recommended for outside mount only when an obstruction protrudes beyond the window, such as window cranks and other mechanisms. Extension brackets are adjustable. Must request at time of order. See page 12 for part number.

Critical Dimensions

HEADRAIL DIMENSIONS AND INSTALLATION DEPTH REQUIREMENTS


Headrail is 1 7/16" deep x 1 1/2" high.

Minimum Depth to Install (Headrail will protrude)	Inside Mount	2 7/8"
Flush Mount Headrail	Inside Mount	3 1/2"
Flush Mount Vanes and Fabric Folds (Pleats)	Inside Mount	6 1/4"
Flush Mount Channel Valance	Inside Mount	4 1/8"
Flush Mount Fabric Wrap Valance	Inside Mount	5 1/2"
Minimum Clearance from Wall/Window to Headrail	Inside and Outside Mount	2 3/4"


ESTATE™ VALANCE CLEARANCE FOR OUTSIDE MOUNT

The Estate Valance with Ball finial requires 7" of clearance for the finial past each end of the headrail or 1 1/2" of clearance for the End Cap finial past each end of the headrail.

Estate Valance with Ball Finial

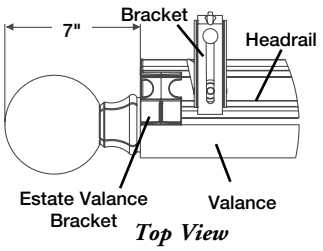

Estate Valance with End Cap

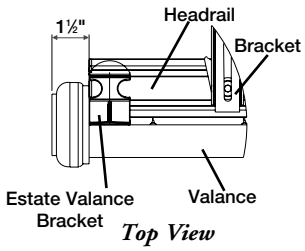

***Estate Valances are available on Outside Mount only.**

SIZE LIMITATIONS

	One Way Minimum Width	Dual Stack Minimum Width	Center Stack Minimum Width	One Way, Dual, and Center Stacks Maximum Width	Minimum Height	Maximum Height
Inside Mount (IM)	13 3/8"	25 7/8"	48"	144"	12"	144"
Outside Mount (OM)	13 1/8"	25 5/8"	48"	144"	12"	144"

FACTORY DEDUCTIONS


	Inside Mount	Outside Mount
Headrail	1/4"	0"
Fabric	1/4"	0"

An extra 5/8" deduction on the vane length will be taken when an inside mount with a fabric valance is ordered.

OUTSIDE MOUNT VALANCE RETURN MEASUREMENT

Standard valance return is 2 3/4". If a longer return is needed, measure the inside return length of the valance as shown and provide measurement.

Outside Mount Valance (top view)

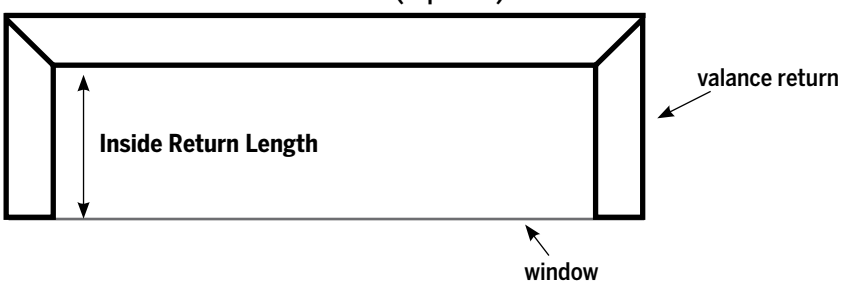

Critical Dimensions

CONTROL LENGTH

Shade Height	Cordless Wand Length*
18" - 24"	12"
24 1/8" - 36"	20"
36 1/8" - 96"	33"
96 1/8" - 108"	47"
108 1/8" - 120"	59"
120 1/8" - 132"	69"
132 1/8" - 144"	80"

***Length of cordless wand is from top of headrail.**

INSTALLATION BRACKETS AND VALANCE CLIPS

Included with Shade.


Shade Width	Number of Brackets	Number of Valance Clips
Up to 36"	3	3
36 1/8" to 66"	4	4
66 1/8" to 96"	5	5
96 1/8" to 126"	6	6
126 1/8" to 144"	7	7

HEM SIZE

Top Hem	2"
Bottom Hem	1"

Light Control Index

Each collection is rated for light control. This convenient indicator can be found next to the Available Colors grid on each pricing page.



NOTE: For enhanced light control and privacy, utilize Outside Mount installation with required top (3") and side (4") overlap.
See page 4 for Outside Mount requirements.

Finish Index

PRICE GROUP H

Sheer Collection

Color #	Description
20132161	Snow
20132101	Whisper
20132104	Tumbleweed

PRICE GROUP I

Linen Collection

Color #	Description
20431501	Whisper
20431502	Cream
20431503	Candlelight
20431506	Dijon
20431514	Sand
20431505	Mink
20431515	Slate
20431520	Espresso

Translucence Collection

Color #	Description
20535001	Whisper
20535002	Cream
20535003	Candlelight
20535104	Sand
20532418	Sterling
20532419	Sage
20535073	Everglade
20532405	Mink
20535070	Dijon
20532417	Sangria
20535071	Chili Spice
20535072	Mocha
20532420	Espresso

PRICE GROUP J

Threaded Sheer Collection

Color #	Description
20332361	Snow
20332302	Cream
20332325	Daylight

Cleaning Guide

Routine care of Perceptions Room Darkening Sheers will allow the shade to provide elegance and versatility for years of enjoyment.



Routine Maintenance

Periodic dusting will keep the shade looking clean and new. For many shades this will be the only cleaning required.



Stain Removal

Should the shade become soiled, it may be necessary to spot clean. Gently dab the stain with lukewarm water and add a mild detergent if needed. Careful blotting of the fabric should avoid creasing or wrinkling. With any detergent solution, always test for colorfastness on an inconspicuous area.



Heavier Cleaning

Occasionally it might be necessary to remove excess dust accumulation by using the soft brush attachment of a vacuum cleaner.

The suggested cleaning instructions must be followed to maintain the lifetime limited warranty.

Features and Benefits

LIGHT CONTROL

Levolor presents a beautiful window covering that functions as a light filtering drapery and a room darkening shade all in one. Perfect for adding ambiance to formal rooms or casual settings, Levolor Perceptions Room Darkening Sheers are the most versatile window covering for any décor. Choose fabric, valance and control options that fit any room.



Light Filtering
Fabrics filter light when vanes are open



Room Darkening
Vanes block light when vanes are rotated closed

Options and Upgrades

CORDLESS WAND CONTROL - STANDARD

Cordless Wand Control eliminates dangling cords and chains, providing safe and smooth operation.

- One-control convenience - vanes are rotated and traversed with the wand
- Streamlined appearance
- Increases safety
- Sizes listed on page 6
- Available in styles and finishes below



	Wand Finishes			
Wand Styles	White	Off White	Satin Nickel	Bronze
Traditional	67171	67172	67174	67176
Transitional	67271	67272	67274	67276

CONTROL AND STACK OPTIONS



One Way Right
Right Stack



One Way Left
Left Stack




Dual Stack
controls on left or right



Center Stack
For Wand Control, wand on left and right

STANDARD CHANNEL VALANCE


- Comes standard on each shade at no charge.
- Valance color coordinates to fabric color.

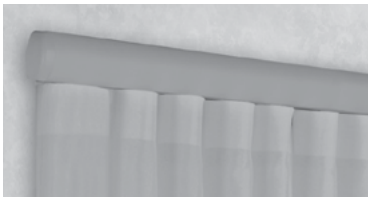

	Height	Depth	Min Return	Max Return	Std Return
Channel Valance	1 3/8"	5/8"	2"	6"	2 3/4"

See page 5 for valance return measuring instructions.

UPGRADES

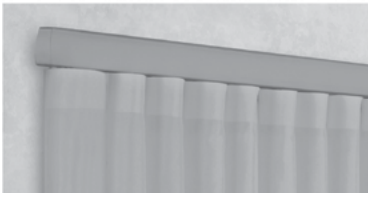


Fabric valance upgrade

- Valance color coordinates to fabric color.

	Height	Depth	Min Return	Max Return	Std Return
Fabric Valance	2"	1/2"	2"	6"	2 3/4"

See page 5 for valance return measuring instructions.

Estate™ Collection

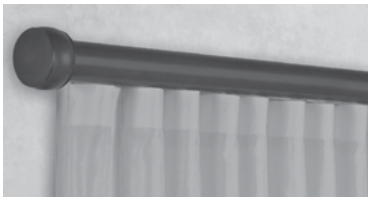

Estate™ End Cap upgrade

- Available for Outside Mount only.
- See clearance requirements on page 5.



Estate Ball upgrade

- Available for Outside Mount only.
- See clearance requirements on page 5.

Estate collection valance colors:

	White	Oak	Walnut	Mahogany	Sandblasted Black
End Cap	35133	35137	35136	35128	35131
Ball	35125	35086	35135	35138	35129

	Height	Depth
Estate™ Valance	2"	1"

Vane Count and Stacking Chart


	One Way Stack			Dual Stack		
SHADE WIDTH	NO. OF VANES	STACK WIDTH	CLEAR OPENING*	NO. OF VANES	STACK WIDTH	CLEAR OPENING*
13 1/8"	4	3 7/8"	9 1/4"	---	---	---
16 1/4"	5	4 1/8"	12 1/8"	---	---	---
19 3/8"	6	4 1/2"	15"	---	---	---
22 1/2"	7	4 3/4"	17 3/4"	---	---	---
25 5/8"	8	5 1/8"	20 1/2"	8	3 7/8"	18"
28 3/4"	9	5 1/2"	23 1/4"	---	---	---
31 7/8"	10	5 3/4"	26"	10	4 1/8"	23 5/8"
35"	11	6 1/8"	28 7/8"	---	---	---
38 1/8"	12	6 1/2"	31 5/8"	12	4 1/2"	29"
41 1/4"	13	6 3/4"	34 1/2"	---	---	---
44 3/8"	14	7 1/8"	37 1/4"	14	4 3/4"	34 3/4"
47 1/2"	15	7 1/2"	40"	---	---	---
50 5/8"	16	7 3/4"	42 3/4"	16	5 1/4"	40 3/8"
53 3/4"	17	8 1/8"	45 5/8"	---	---	---
56 7/8"	18	8 1/2"	48 3/8"	18	5 1/2"	46"
60"	19	8 3/4"	51 1/4"	---	---	---
63 1/8"	20	9 1/8"	54"	20	5 3/4"	51 1/2"
66 1/4"	21	9 3/8"	56 7/8"	---	---	---
69 3/8"	22	9 3/4"	59 5/8"	22	6 1/8"	57"
72 1/2"	23	10 1/8"	62 3/8"	---	---	---
75 5/8"	24	10 3/8"	65 1/4"	24	6 1/2"	62 3/4"
78 3/4"	25	10 3/4"	68"	---	---	---
81 7/8"	26	11 1/8"	70 3/4"	26	6 3/4"	68 1/4"
85"	27	11 3/8"	73 1/2"	---	---	---
88 1/8"	28	11 3/4"	76 3/8"	28	7 1/8"	74"
91 1/4"	29	12 1/8"	79 1/8"	---	---	---
94 3/8"	30	12 3/8"	82"	30	7 1/2"	79 1/2"
97 1/2"	31	12 3/4"	84 3/4"	---	---	---
100 5/8"	32	13"	87 5/8"	32	7 3/4"	85 1/8"
103 3/4"	33	13 3/8"	90 1/4"	---	---	---
106 7/8"	34	13 3/4"	93"	34	8"	90 5/8"
110"	35	14"	96"	---	---	---
113 1/8"	36	14 3/8"	98 3/4"	36	8 1/2"	96 1/4"
116 1/4"	37	14 3/4"	101 1/2"	---	---	---
119 3/8"	38	15"	104 3/8"	38	8 3/4"	101 7/8"
122 1/2"	39	15 3/8"	107 1/8"	---	---	---
125 5/8"	40	15 3/4"	110"	40	9 1/8"	107 3/8"
128 3/4"	41	16"	112 3/4"	---	---	---
131 7/8"	42	16 3/8"	115 1/2"	42	9 3/8"	113"
135"	43	16 3/4"	118 1/2"	---	---	---
138 1/8"	44	17"	121"	44	9 3/4"	118 5/8"
141 1/4"	45	17 3/8"	123 7/8"	---	---	---
144"	46	17 5/8"	126 1/2"	46	10"	124 1/4"

How To Use The Chart:

1. **Select stack type**
   - One Way
   - Dual
2. **Select appropriate clear opening width**
3. **Order shade width in far left column**
   Note: Dual stack requires even number of vanes

*Clear opening chart is for outside mount only.
*For center stack, use one way stack column.

Exploded View - Cordless Wand Control

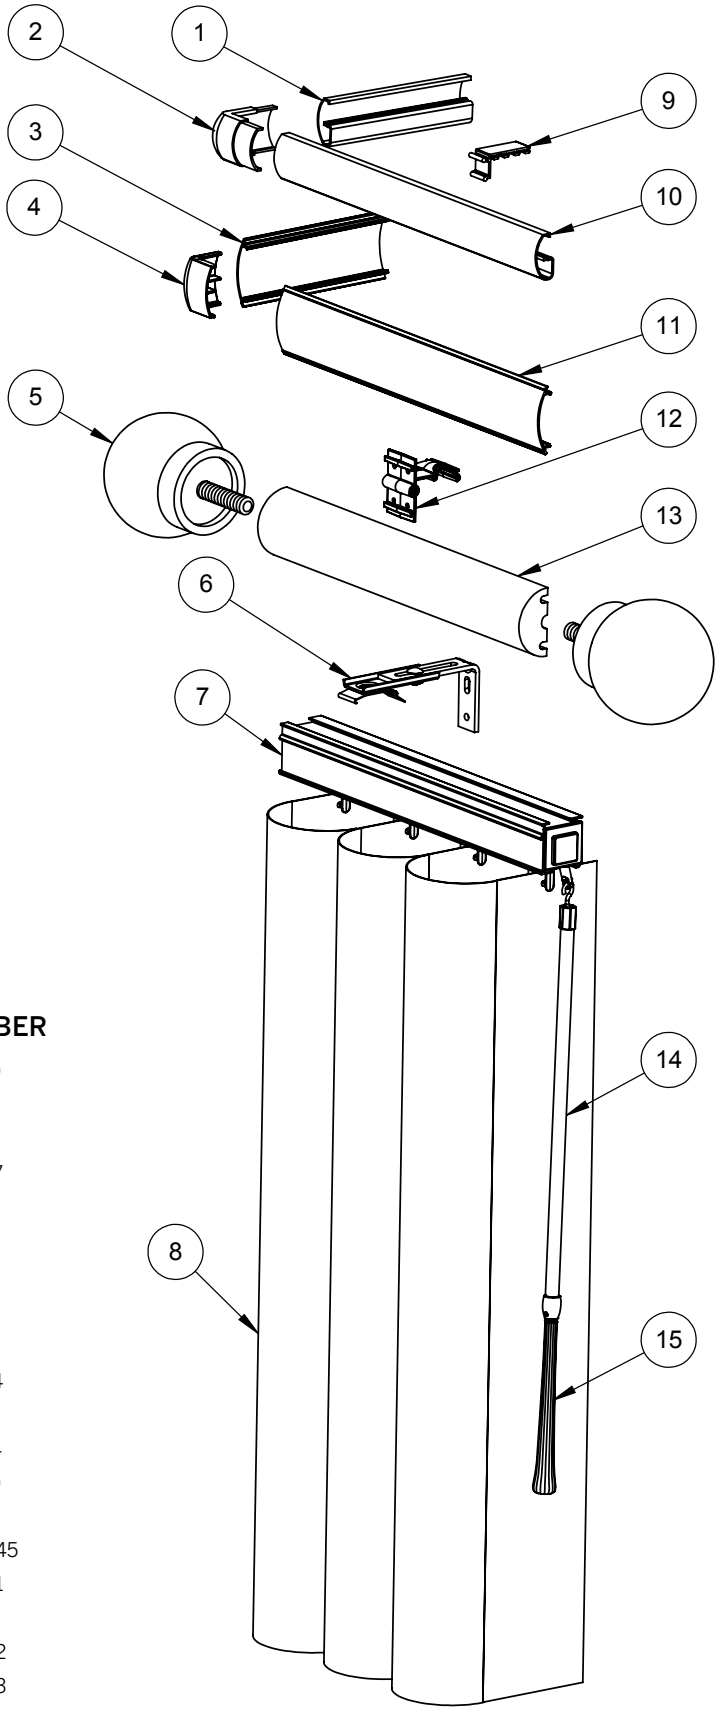

	PART DESCRIPTION	PART NUMBER
1	Channel Valance Return	V27S0000
2	Channel Valance Corner	V17C0000
3	Fabric Valance Return	SD144005
4	Fabric Valance Corner	HBCK0067
5	Estate™ Valance Finial	---
6	Installation Bracket	---
	Outside Mount	905400LC
	Inside Mount	905300LC
	Extension Bracket*	905450LC
7	Headrail	RAHR0054
8	Vane Pack	---
9	Channel Valance Bracket	HFCP0044
10	Channel Valance	V27S0000
11	Fabric Valance	SD150005
12	Estate And Fabric Valance Bracket	HFCP0046/45
13	Estate Valance Fascia	PD0206-01
14	Wand Rod	RPLE007X
15	Traditional Handle	HGWN0022
	Transitional Handle *	HGWN0023

* = Not Pictured

©2026 LEVOLOR®, Inc.
5775 Glenridge Drive, Building A
Atlanta, GA 30328
26-0062-005