LEVOLOR PREMIER


Cordless Roller Shades

Contents

Cordless Standard 2
Cordless Cassette 4
Bottom Rail End Caps 6
Cassette Brackets 6
Large Square Cassettes 7
Large Square Cassette End Caps 7
Cassette Back Covers 8

© 2024 LEVOLOR

Cordless Standard

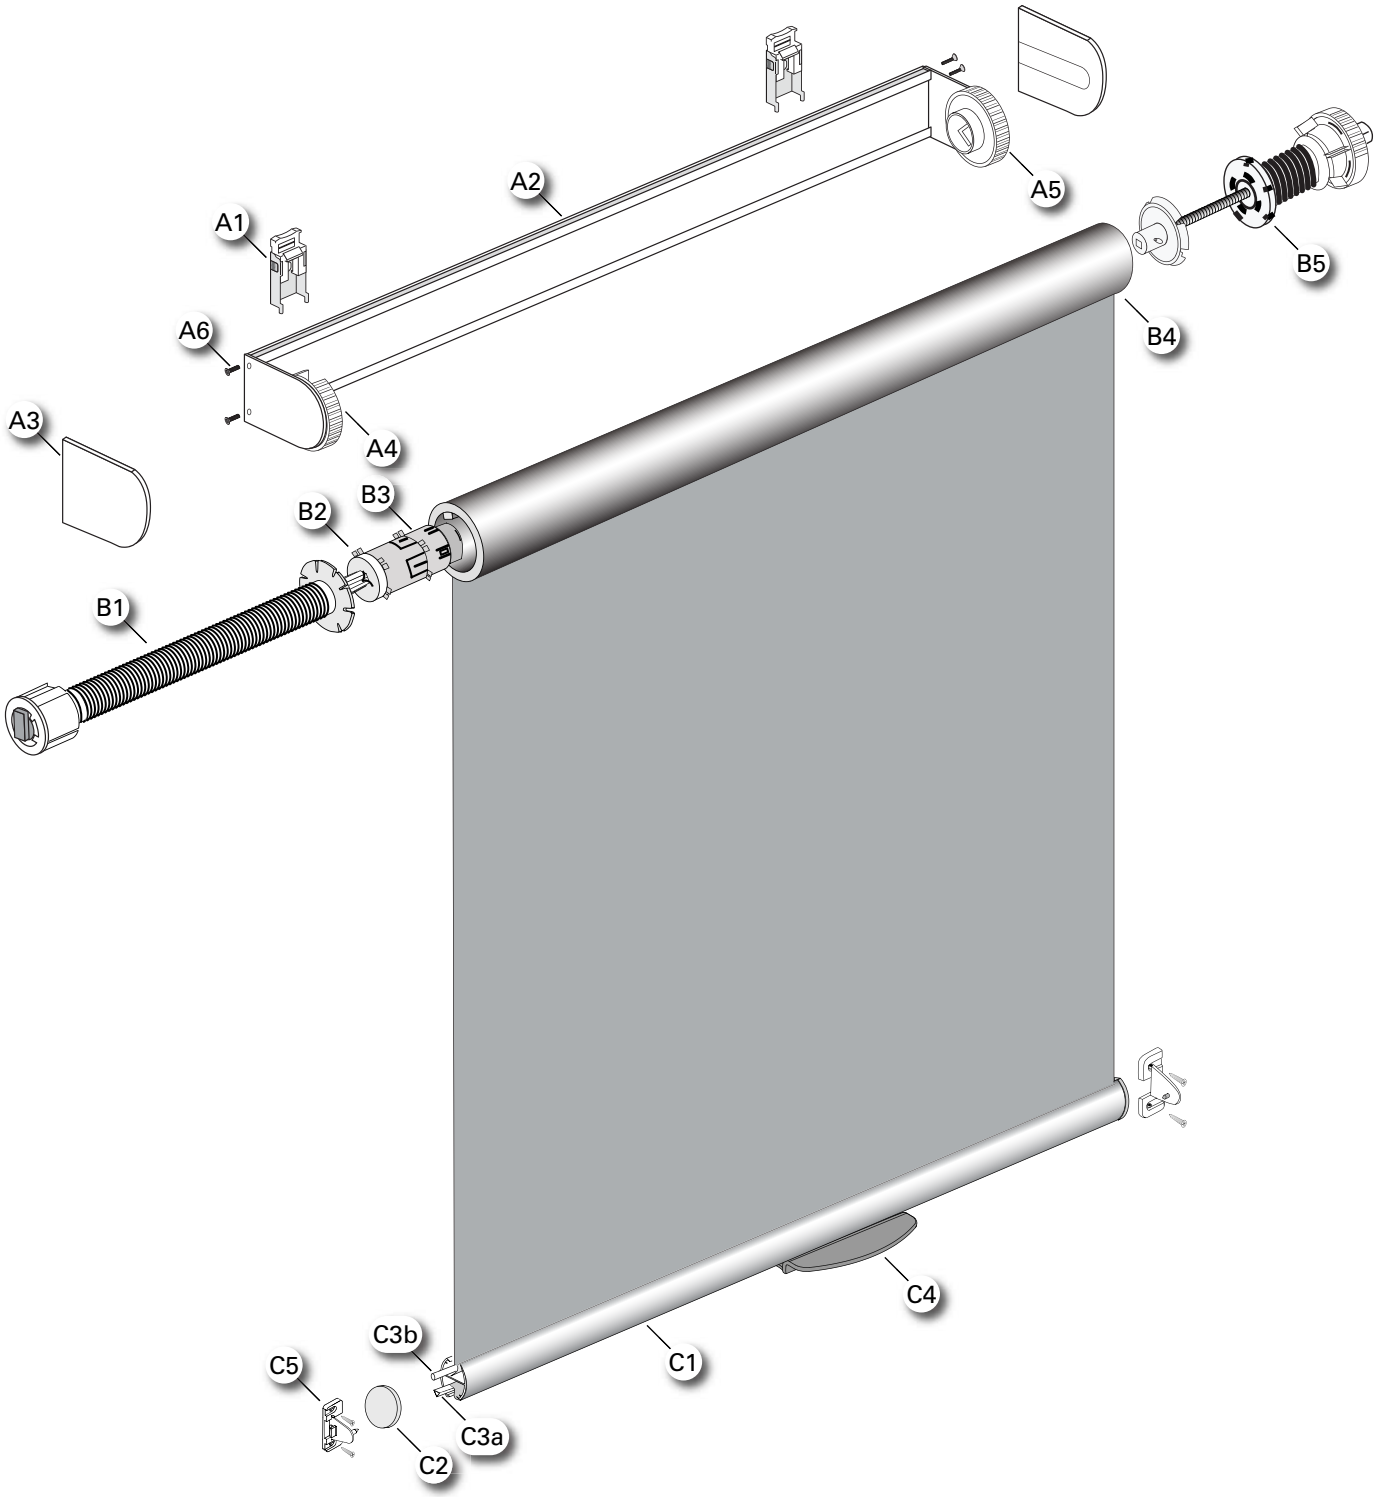


Cordless Standard

No.	PCN	Description
A1.	RC445172	3 Pack Cordless Universal Mounting Brackets
A2.	RC450006	Mounting Profile
A3.	Side Holder Covers	
	RC450110	Short White
	RC512048	Short Black
	RC450111	Long White
	RC513048	Long Black
A4.	Left Side Holder (For Spring Side) (White)	
	RC450112	SP Short
	RC450113	SP Long
A5.	Side Holder (For Stop Controller Side) (White)	
	RC450114	SC Short
	RC450115	SC Long
A6.	RC450081	MT01 Attachment Screws
B1.	Spring	
	RC450100	Set A
	RC450101	Set B
	RC445322	Set C
	RC450102	Set D
	RC450103	Set F
	RC450104	Set Y
B2.	Clutch and Pin	
	RC450078	Cordless Clutch
	RC450079	Pin (to secure Clutch and Spring together)
B3.	Speed Controller	
	RC450095	800 GFCM
	RC450096	400 GFCM
B4.	RC450037	Cordless Tube
B5.	RC450097	Stop Controller
C1.	RC535xxxL192	Round Bottom Bar
C2.	Round Bottom Bar End Caps	
	See **Bottom Rail End Caps**	
C3.	Profiles (for use inside the bottom bar)	
a.	RC445087	Triangle
b.	RC5433L192	Fabric Profile SBB 830-16 FT
	RC445513	Bottomrail Strip SBB 830 (Use with Fabrication Equipment Only)
C4.	RC553000	LiteRise Handle SBB 830
C5.	PC555270	Plastic Hold-Down Brackets (Optional)

No.	PCN	Description
	Parts Not Shown	
	Round Bottom Bar	
	RC10EQ	Insertion Tool
	KIT2009	Plastic Hold-Down Brackets
	KIT9108	Magnetic Hold-Down Bracket Kit
	KIT9111	Kit Retrofit Magnetic Hold Down
	RC450120	Winder
	Shade Options (Upgrades)	
	RC540xxx	End Cap Metal LH, SBB 830
	RC539xxx	End Cap Metal RH, SBB 830

xxx = Color Code

Cordless Cassette

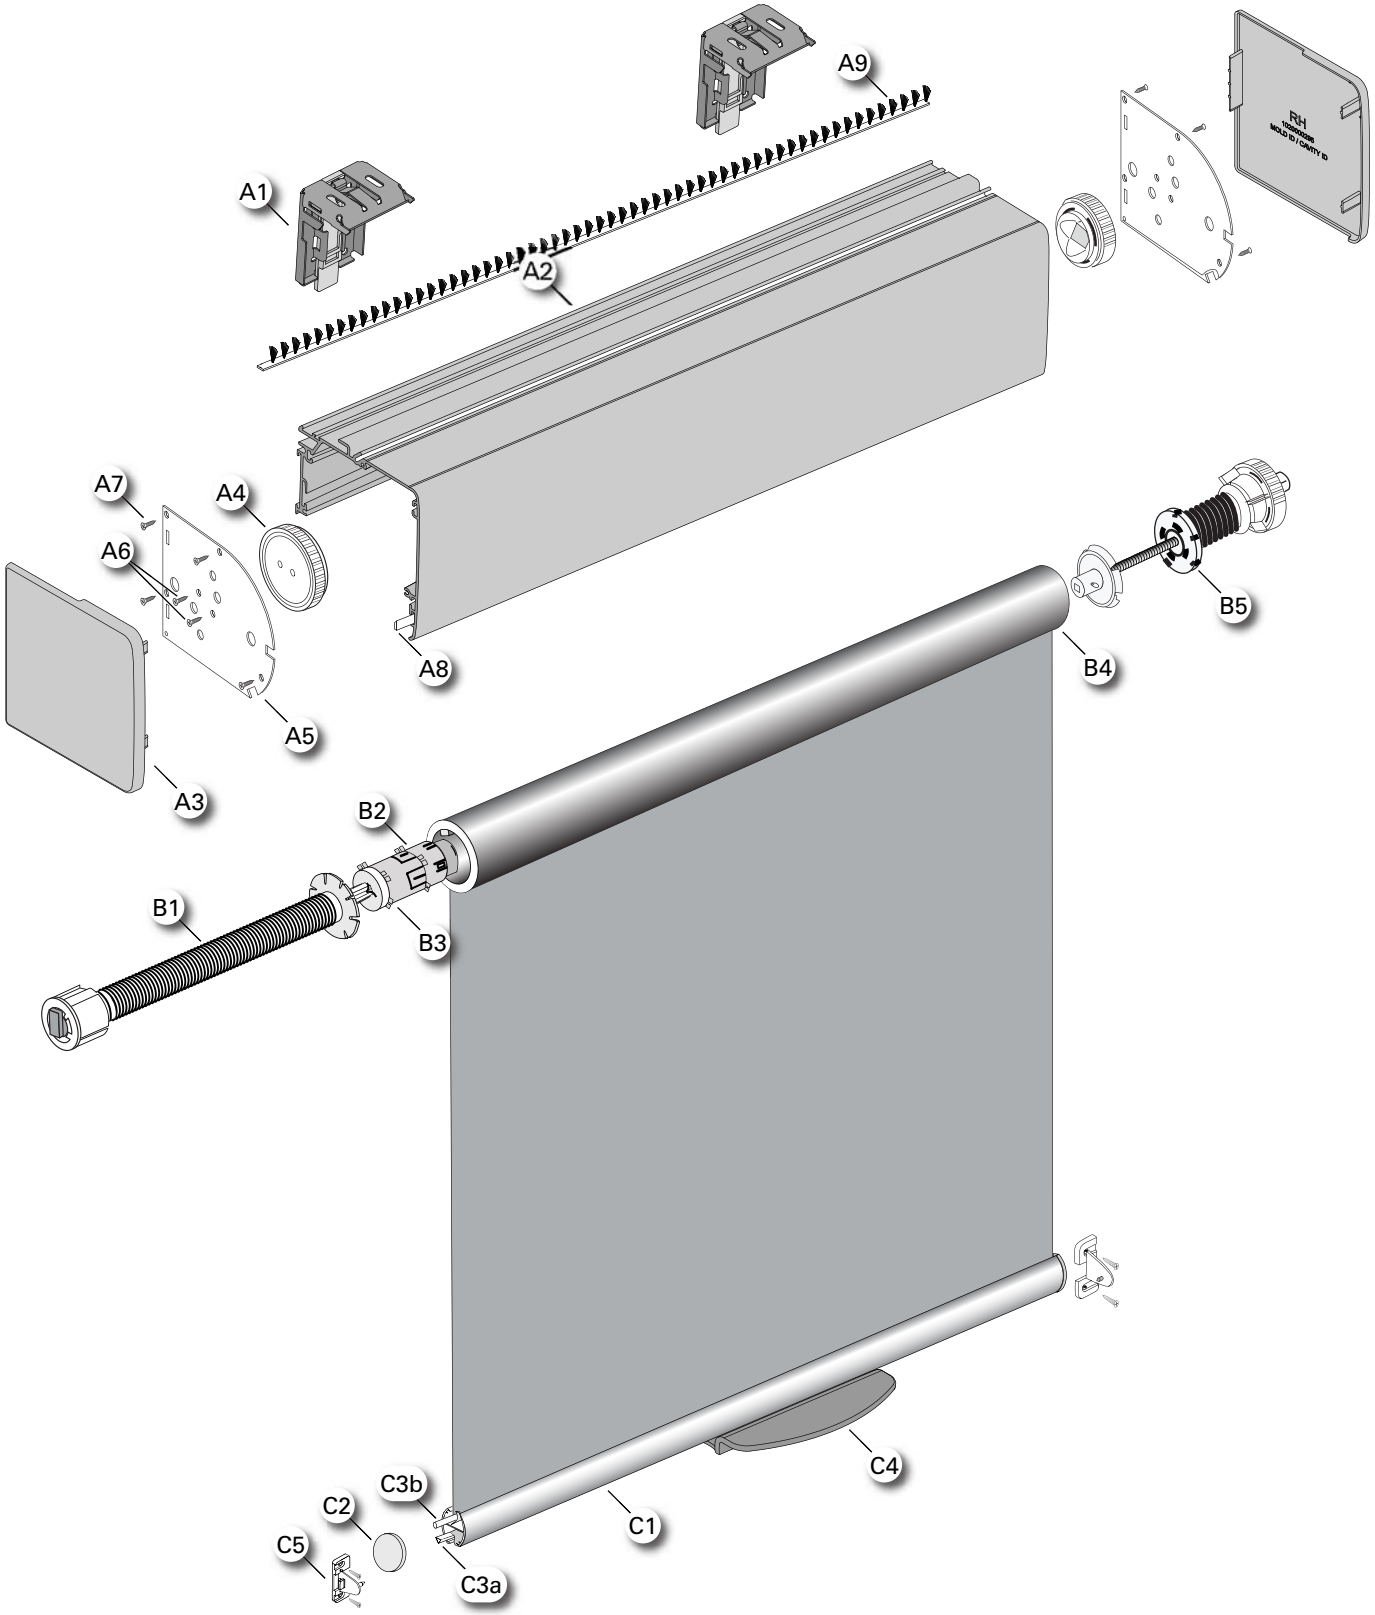

Cordless Cassette

No.	PCN	Description
A1.	Cassette Brackets	
	See **Cassette Brackets**	
A2.	Large Square Cassette	
	See **Large Square Cassettes**	
A3.	Large Square Cassette End Caps	
	See **Large Square Cassette End Caps**	
A4.	Cassette End Plate Attachments	
	RC450116	Stop Controller Side Holder Bracket (For Right Side End Plate)
	RC450117	Spring Side Holder Bracket (For Left Side End Plate)
A5.	Cassette End Plates (Roman/Motorized/Cordless)	
	RMC601000L	Left Side
	RMC601000R	Right Side
A6.	RC450081	MT01 Cassette End Plate Attachment Screw (White Head)
A7.	RC450003	CAS Screw 4-40 x 3/8, FH, Type F, Tappin
A8.	Cassette Wrap Components	
	RC445432	Cassette Fabric Spline
A9.	2780229000	Light Block Strip NXG (IB Only)
B1.	Spring	
	RC450100	Set A
	RC450101	Set B
	RC445322	Set C
	RC450102	Set D
	RC450103	Set F
	RC450104	Set Y
B2.	Speed Controller	
	RC450095	800 GFCM Speed Controller
	RC450096	400 GFCM Speed Controller
B3.	Clutch and Pin	
	RC450078	Cordless Clutch
	RC450079	Pin (to secure Clutch and Spring together)
B4.	RC450037	Cordless Tube
B5.	RC450097	Stop Controller
C1.	RC535xxxL192	Round Bottom Bar
C2.	Round Bottom Bar End Caps	
	See **Bottom Rail End Caps**	
C3.	Profiles (for use inside the bottom bar)	
a.	RC445087	Triangle
b.	RC5433L192	Fabric Profile SBB 830-16 FT
	RC445513	Bottomrail Strip SBB 830 (Use with Fabrication Equipment Only)
C4.	RC553000	LiteRise Handle SBB 830
C5.	KIT2009	Plastic Hold-Down Brackets (Optional)

No.	PCN	Description

Parts Not Shown

Large Cassette Back Cover

See **Large Cassette Back Covers**

Large Cassette Back Cover Clips

1029033	1/4" Back Cover Clip (2pk)
1029034	5/8" Back Cover Clip (2pk)
1029035	1" Back Cover Clip (2pk)
1033129	1/4" Back Cover Clip (3pk)
1033300	5/8" Back Cover Clip (3pk)
1033301	1" Back Cover Clip (3pk)

Round Bottom Bar

RC10EQ	Insertion Tool

Hold-Down Brackets

KIT9108	Magnetic Hold-Down Brackets
KIT9111	Kit Retrofit Magnetic Hold Down

Spacer Blocks

KIT6102	5/8" Spacer Block Kit w/Screws (2 pack)
KIT6103	5/8" Spacer Block Kit w/Screws (3 pack)

Shade Options (Upgrades)

RC540xxx	End Cap Metal LH, SBB 830
RC539xxx	End Cap Metal RH, SBB 830

xxx = Color Code

Bottom Rail End Caps

Color#	PCN	Description
LH		
048	1029268	Black
064	1029269	Bronze
235	1029720	Gold
316	1029721	Nickel
320	1029722	Cream
351	1029723	Duchess Grey
661	1029724	White Tiara
859	1029725	Desert Tan
879	1029726	Pearl Gray
903	1029727	Desert Gold

Color#	PCN	Description
RH		
048	1029728	Black
064	1029729	Bronze
235	1029730	Gold
316	1029731	Nickel
320	1029732	Cream
651	1029733	Duchess Grey
661	1029734	White Tiara
859	1029735	Desert Tan
879	1029736	Pearl Gray
903	1029737	Desert Gold

Cassette Brackets

Color#	PCN	Description
2-Packs		
048	1020892	Black
064	1020893	Bronze
235	1020894	Gold
316	1020895	Nickel
320	1020896	Cream
651	1020897	Duchess Grey
661	1020898	White Tiara
859	1020899	Desert Tan
879	1020900	Pearl Gray
903	1020901	Desert Gold

Color#	PCN	Description
3-Packs		
048	1020902	Black
064	1020903	Bronze
235	1020904	Gold
316	1020905	Nickel
320	1020906	Cream
651	1020907	Duchess Grey
661	1020908	White Tiara
859	1020909	Desert Tan
879	1020910	Pearl Gray
903	1020911	Desert Gold

Large Square Cassettes

Color#	PCN	Description
048	1017859	Black
064	1017860	Bronze
235	1017861	Gold
316	1032957	Nickel
320	1017863	Cream
651	1017864	Duchess Grey
661	1017865	White Tiara
859	1017866	Desert Tan
879	1017867	Pearl Gray
903	1017868	Desert Gold

Large Square Cassette End Caps

Color#	PCN	Description
LH		
048	1020842	Black
064	1020843	Bronze
235	1020844	Gold
316	1020845	Nickel
320	1020846	Cream
651	1020867	Duchess Grey
661	1020868	White Tiara
859	1020849	Desert Tan
879	1020850	Pearl Gray
903	1020851	Desert Gold

Color#	PCN	Description
RH		
048	1020802	Black
064	1020803	Bronze
235	1020804	Gold
316	1020805	Nickel
320	1020806	Cream
651	1020867	Duchess Grey
661	1020868	White Tiara
859	1020809	Desert Tan
879	1020840	Pearl Gray
903	1020841	Desert Gold

Large Cassette Back Covers

Color#	PCN	Description
048	1029039	Black
064	1029040	Bronze
235	1029041	Gold
316	1029042	Nickel
320	1029043	Cream
651	1029044	Duchess Grey
661	1029045	Tiara White
859	1029046	Desert Tan
879	1029047	Pearl Grey
903	1029048	Desert Gold