
Touch Control

Contents

Cassette with Touch Control Motor **2**
Large Square Cassettes **5**
Large Square Cassette End Caps **5**
Small Square Cassettes **6**
Small Square Cassette End Caps **6**
Bottom Bar End Caps **7**
Cassette Back Covers **7**
Cassette Brackets **8**
Cassette Hardstops **8**
Additional Parts **9**
Power Supplies **9**
Mounting Hardware **10**

© 2025 LEVOLOR

Cassette with Touch Control Motor

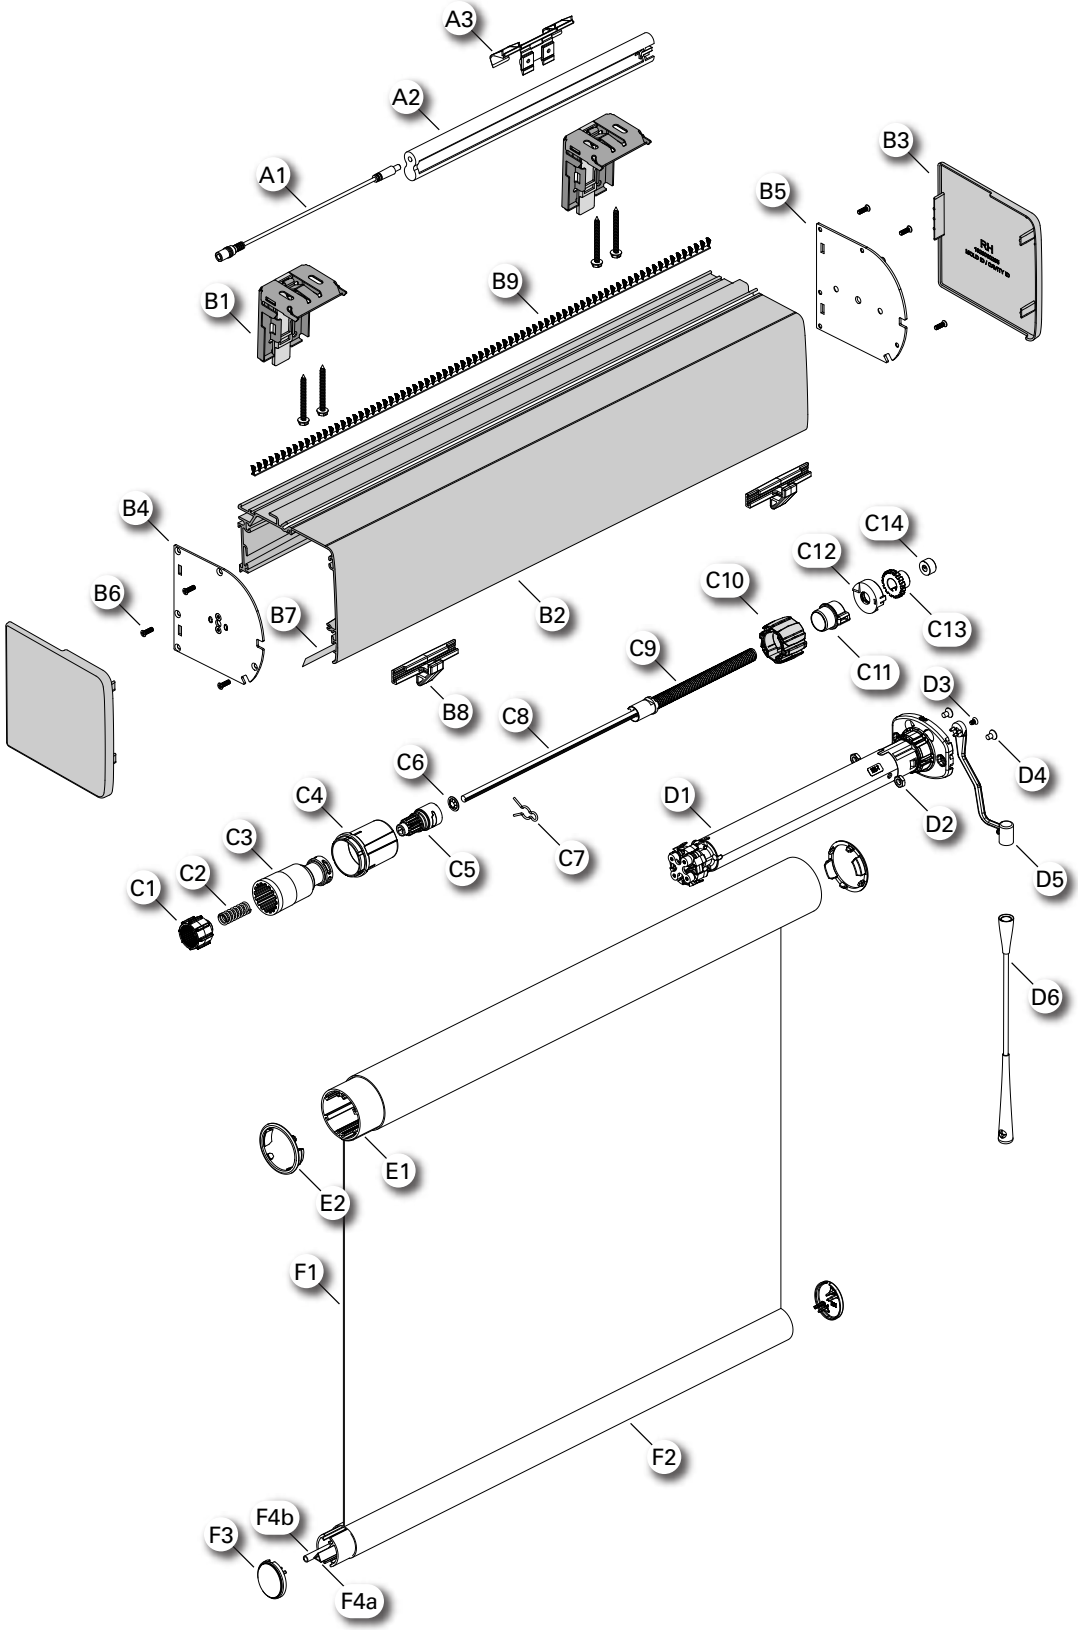

Cassette with Touch Control Motor

No.	PCN	Description
A1.	Cable Assembly (Optional)	
	1026660	15"
	1026661	4'
	1026662	10'
	1026663	20'
A2.	7520062000	Battery Wand, 18V, Preloaded
A3.	RC248000	Battery Wand Clip
B1.	Cassette Brackets	
	See **Cassette Brackets**	
B2.	Large Square Cassette	
	See **Large Square Cassettes**	
B3.	Large Square Cassette End Caps	
	See **Large Square Cassette End Caps**	
B4.	RC445496	Cassette Assy LH CL RLR
B5.	RC445546	LG Cass Endplate RH, Touch Control RLR
B6.	RC450003	Cas Screw 4-40 x 3/8; FH; TYPE F; Tappin
B7.	RC445432	Cassette Fabric Spline 144"
B8.	Cassette Hardstops	
	See **Cassette Hardstops**	
B9.	WWC900532	Light Block Strip NXG (IB Only)
C1.	RC445476	Locking Plunger, LR Roller
C2.	RC445478	Compression Spring, CL RLR
C3.	RC445475	Inner Housing, CL Roller
C4.	BNDC1005XXX	M Crown, CL, Roller
C5.	RC445455	Coupling Half, Removable
C6.	RC445435	Push Nut 0.18 x 0.44 0.64, Steel
C7.	RC445528	RW/CL Cotter Pin, Zinc
C8.	MPHR013026	V Shaft Rod, Steel 11 FT
C9.	RPV1005	Mars Threaded Stop
C10.	1036632	Mars Drive Adapter 31-37MM
C11.	RC445586	Assy; Mars Drive Plug 2 (50)
C12.	RC445565	Mars Bottom Stop WDD (250)
C13.	RC445507	Bottom Stop Lock
C14.	2920750000	Locking Collar Assy – NGPR (Metal)
D1.	1003542	BND RLR Touch Control Motor Assy
D2.	RC445509	6-32 Hex Mach Screw Nuts-Zinc
D3.	4130062000	Screw, Torx 4 x 0.3125
D4.	RC445566	6-32 x 1/4" FHP Lockpatch SS Screw
D5.	Touch Control Arm, Roller, Large Cassette	
	1029700	Black
	1029701	White Tiara

No.	PCN	Description
D6.	Touch Control Wand	
	4134912XXX	TC Wand Assy 12"
	4134918XXX	TC Wand Assy 18"
	4134924XXX	TC Wand Assy 24"
	4134930XXX	TC Wand Assy 30"
	4134936XXX	TC Wand Assy 36"
	4134842XXX	TC Wand Assy 42"
	4134848XXX	TC Wand Assy 48"
	1016954	TC Wand Assy 12"; Pearl Gray; 879
	1020290	TC Wand Assy 18"; Pearl Gray; 879
	1016955	TC Wand Assy 24"; Pearl Gray; 879
	1016956	TC Wand Assy 30"; Pearl Gray; 879
	1016957	TC Wand Assy 36"; Pearl Gray; 879
	1016958	TC Wand Assy 42"; Pearl Gray; 879
	1016959	TC Wand Assy 48"; Pearl Gray; 879
E1.	RN1601L192PAL	31mm (1 3/8") Tube W/Tape Pallet
E2.	RN1400XXX	Adapter M 37
F1.	N/A	Fabric
F2.	RC535XXXL192	Std Bottom Bar 830
	1016911	Std Bottom Bar; Pearl Gray; 879
F3.	Bottom Rail End Caps	
	See **Bottom Bar End Caps**	
F4.	Profiles	
a.	RC445087	Triangle
b.	RC5433L192	Fabric Profile SBB 830-16 FT - Manual
	RC445513	Bottom Rail Strip SBB 830 (Use with Fabrication Equipment Only)

Parts Not Shown

RC544XXXL192	Flat Bottom Bar 2 Roller (160)
1016910	Rail; Bottom; Flat 2; 160 FT; Pearl Gray; 879
RC582XXX	Endcap Flat Bottom Bar 2 (200)
1016926	Endcap; Rail; Bottom; Flat 2; 200 CT; Pearl Gray; 879
RC160000	Flat Bottom Bar Stop, Clear
RC445441	Screws for the Rail Stop
RN1602L192	37mm (1.5") Tube w/Tape
RMC601009	1/2"W x 5/16"L Staple
1037170	Mars E Assembly Standard (25)
RC445579	Mars D Assembly Standard (25)
RC445578	Mars C Assembly Standard (25)
RC445577	Mars B Assembly Standard (25)
RC445576	Mars A Assembly Standard (25)
RC445581	Mars AA Assembly Standard (25)
1036630	Spring Support Adapter 31/37mm

XXX = 3-digit color code

Cassette with Touch Control Motor continued next page.

Cassette with Touch Control Motor, cont.

No.	PCN	Description

Parts Not Shown (continued)

Small Square Cassette
See Small Square Cassettes

Small Square Cassette End Caps
See Small Square Cassette End Caps

Cassette Back Cover
See Cassette Back Covers

Back Cover Clips

1029033	1/4" Back Cover Clip (2pk)
1029034	5/8" Back Cover Clip (2pk)
1029035	1" Back Cover Clip (2pk)
1033129	1/4" Back Cover Clip (3pk)
1033300	5/8" Back Cover Clip (3pk)
1033301	1" Back Cover Clip (3pk)

Left Control Components

RC445497	Cassette Assy RH CL RLR

Endplates

BNDC1003	SM Cassette Assy RH, CL RLR
BNDC1004	SM Cassette Assy LH, CL RLR
RC445544	SM Cass Endplate RH, Touch Control RLR
RC445545	SM Cass Endplate LH, Touch Control RLR
RC445547	LG Cass Endplate LH, Touch Control RLR

No.	PCN	Description

Parts Not Shown (continued)

Arm Assemblies

RC563XXX	Arm Assy TC RLR RH Sm Cass
RC564XXX	Arm Assy TC RLR LH Sm Cass
RC566XXX	Arm Assy TC RLR LH Lg Cass
RC565XXX	Arm Assy TC RLR RH Lg Cass
1016950	Arm Assy TC RLR LH Lg Cass; Pearl Gray; 879
1016951	Arm Assy TC RLR RH Lg Cass; Pearl Gray; 879
1016952	Arm Assy TC RLR LH Sm Cass; Pearl Gray; 879
1016953	Arm Assy TC RLR RH Sm Cass; Pearl Gray; 879
1029702	Arm Assy TC RLR LH Lg Cass Blck; 048
1029703	Arm Assy TC RLR LH Lg Cass Wh T; 661
1029606	Arm Assy TC RLR RH Sm Cass Blck; 048
1029607	Arm Assy TC RLR RH Sm Cass Wh T; 661
1029608	Arm Assy TC RLR LH Sm Cass Blck; 048
1029609	Arm Assy TC RLR LH Sm Cass Wh T; 661

Cassette Wrap Components

1021406	Tape 1.25" HBM 2139
1021407	Tape 1.75" HBM 2139
1021408	Tape 1.25 HBM 2170
1021409	Tape 1.75 HBM 2170
RC445432	Cassette Fabric Spline
1005213	Thread; RLR; Skyline; Cass; LT Grey; 5700

Spacer Blocks

1020838	1" (2 Pk)
1020839	1" (3 Pk)
1020890	5/8" (2 Pk)
1020891	5/8" (3 Pk)

XXX = 3-digit color code

Large Square Cassettes

Color#	PCN	Description
048	1017859	Black
064	1017860	Bronze
235	1017861	Gold
316	1032957	Nickel
320	1017863	Cream
651	1017864	Duchess Grey
661	1017865	White Tiara
859	1017866	Desert Tan
879	1017867	Pearl Gray
903	1017868	Desert Gold

Large Square Cassette End Caps

Color#	PCN	Description
LH		
048	1020842	Black
064	1020843	Bronze
235	1020844	Gold
316	1020845	Nickel
320	1020846	Cream
651	1020867	Duchess Grey
661	1020868	White Tiara
859	1020849	Desert Tan
879	1020850	Pearl Gray
903	1020851	Desert Gold

Color#	PCN	Description
RH		
048	1020802	Black
064	1020803	Bronze
235	1020804	Gold
316	1020805	Nickel
320	1020806	Cream
651	1020867	Duchess Grey
661	1020868	White Tiara
859	1020809	Desert Tan
879	1020840	Pearl Gray
903	1020841	Desert Gold

Small Square Cassettes

Color#	PCN	Description
048	1017869	Black
064	1017870	Bronze
235	1017871	Gold
316	1032958	Nickel
320	1017873	Cream
651	1017874	Duchess Grey
661	1017875	White Tiara
859	1017876	Desert Tan
879	1017877	Pearl Gray
903	1017878	Desert Gold

Small Square Cassette End Caps

Color#	PCN	Description
LH		
048	1020862	Black
064	1020863	Bronze
235	1020864	Gold
316	1020865	Nickel
320	1020866	Cream
651	1020867	Duchess Grey
661	1020868	White Tiara
859	1020869	Desert Tan
879	1020870	Pearl Gray
903	1020871	Desert Gold

Color#	PCN	Description
RH		
048	1020852	Black
064	1020853	Bronze
235	1020854	Gold
316	1020855	Nickel
320	1020856	Cream
651	1020857	Duchess Grey
661	1020858	White Tiara
859	1020859	Desert Tan
879	1020860	Pearl Gray
903	1020861	Desert Gold

Bottom Bar End Caps

Color#	PCN	Description
LH		
048	1029268	Black
064	1029269	Bronze
235	1029720	Gold
316	1029721	Nickel
320	1029722	Cream
351	1029723	Duchess Grey
661	1029724	White Tiara
859	1029725	Desert Tan
879	1029726	Pearl Gray
903	1029727	Desert Gold

Color#	PCN	Description
RH		
048	1029728	Black
064	1029729	Bronze
235	1029730	Gold
316	1029731	Nickel
320	1029732	Cream
651	1029733	Duchess Grey
661	1029734	White Tiara
859	1029735	Desert Tan
879	1029736	Pearl Gray
903	1029737	Desert Gold

Cassette Back Covers

Color#	PCN	Description
048	1029039	Black
064	1029040	Bronze
235	1029041	Gold
316	1029042	Nickel
320	1029043	Cream
651	1029044	Duchess Grey
661	1029045	White Tiara
859	1029046	Desert Tan
879	1029047	Pearl Gray
903	1029048	Desert Gold

Cassette Brackets

Color#	PCN	Description
2-Packs		
048	1020892	Black
064	1020893	Bronze
235	1020894	Gold
316	1020895	Nickel
320	1020896	Cream
651	1020897	Duchess Grey
661	1020898	White Tiara
859	1020899	Desert Tan
879	1020900	Pearl Gray
903	1020901	Desert Gold


Color#	PCN	Description
3-Packs		
048	1020902	Black
064	1020903	Bronze
235	1020904	Gold
316	1020905	Nickel
320	1020906	Cream
651	1020907	Duchess Grey
661	1020908	White Tiara
859	1020909	Desert Tan
879	1020910	Pearl Gray
903	1020911	Desert Gold

Cassette Hardstops


Color#	PCN	Description
048	RC146048	Black
064	1021997	Bronze
235	1021998	Gold
316	1021999	Nickel
320	1022260	Cream
651	1022261	Duchess Grey
661	RC146661	White Tiara
859	1022262	Desert Tan
879	1022263	Pearl Gray
903	1022264	Desert Gold

Additional Parts


Power Supplies

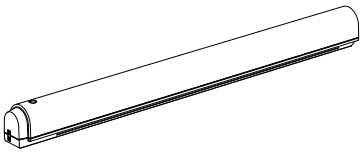


Rechargeable Battery Wand
PCN 1020150

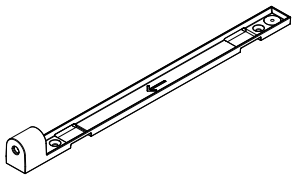


Rechargeable Battery Wand Mount
PCN 1013213

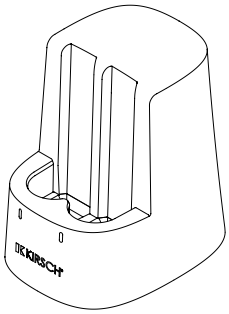


Rechargeable Battery Wand Dual Charging Station
PCN 1013830

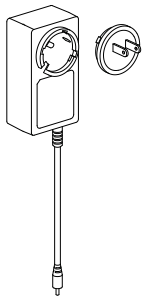


Rechargeable Battery Wand Single Charger
PCN 1027686

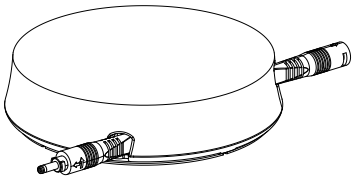


Retractable Charging Cable
PCN 1028093

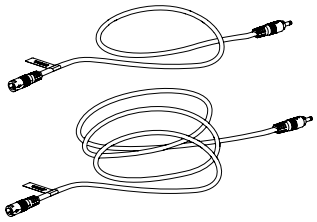


Charging Cable
PCN 1026666 (3')
PCN 1026667 (12')

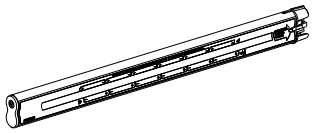


18V Battery Wand
Note: Uses 12 AA batteries.
PCN 7520062000 (Preloaded)
KIT2529 (AA Batteries, 12 ea.)

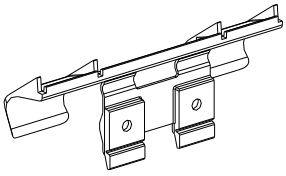


Battery Clip
RC248000

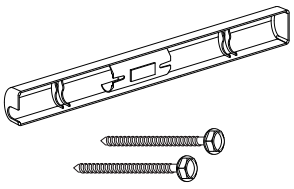


18V Satellite Battery Pack
Note: Extension Cable sold separately.
KIT2791

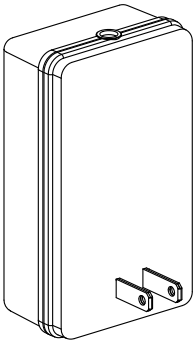

18V DC Power Supply
PCN 7806000000




Extension Cable
Note: Used with Daisy Chain Y Adapter to make a Daisy Chain.
Note: Specify quantity of each cable needed.
PCN 1026660 (15")
PCN 1026661 (4')
PCN 1026662 (10')
PCN 1026663 (20')

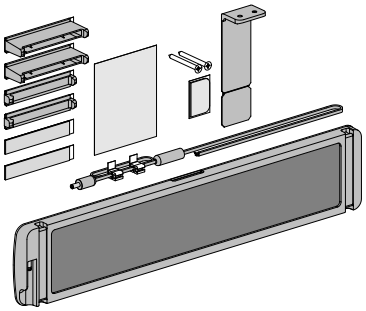

Solar Charger Kit
PCN 1045350 (White)
PCN 1045349 (Black)

Additional Parts

Mounting Hardware

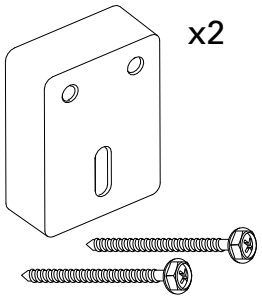

Spacer Block Kit 5/8"
Note: Included with OB cassette shades, optional with IB cassette shades.
KIT6102 (2 Blocks – Shown)
KIT6103 (3 Blocks)