


Optional Mounting Brackets for Roman and Cellular Shades

Extension Brackets and Spacers

Extension Brackets

(Offers clearance for obstructions)
Outside mounting extension brackets will provide 1"–3" clearance between the headrail and mounting surface. Assemble extension bracket as shown. Secure an extension bracket to each standard mounting bracket.

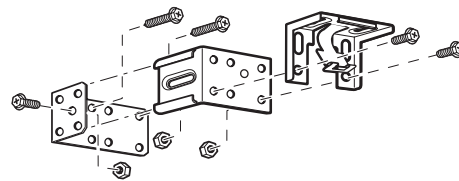

Spacers


Outside mounting spacers will provide an additional 3/8" clearance as shown. If spacers are used, longer screws may be required to ensure a secure installation. Utilize one spacer behind each bracket.



Side-Mount Brackets


(Ideal for windows below transoms and arches)


Alternative mounting method when no frame is available above the window for mounting. Use only if shade dimensions fall within 17" W x 18" L (corded) or 18" W x 18" L (cordless) to a maximum of 48" W x 72" L.

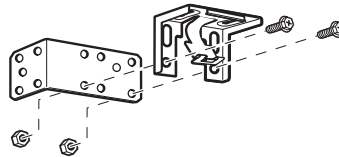

Hold-Down Brackets

Ideal for doors, hold-down brackets prevent the shade from swaying. Assemble as shown to each side of bottom rail.

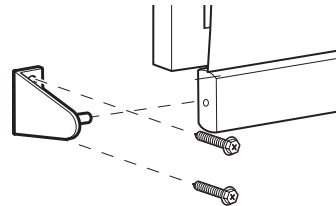

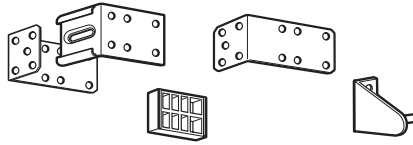


Soportes Opcionales para Persianas Romanas y Celulares

Extension Brackets and Spacers

Soportes de extensión

(Ofrece espacio libre para obstrucciones)

Los soportes de extensión de montaje externo ofrecen 1"–3" de espacio libre entre el riel superior y la superficie de montaje. Arme el soporte de extensión como puede verse. Coloque un soporte de extensión en cada soporte de montaje normal.

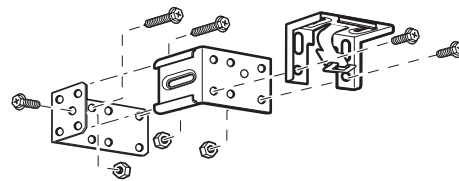

Espaciadores


Los espaciadores de montaje externo brindan un espacio libre adicional de 3/8" como puede verse. Si utiliza espaciadores, pueden necesitarse tornillos más largos para garantizar una instalación más segura. Use un espaciador detrás de cada soporte.



Soportes de montaje lateral

(Ideal para ventanas ubicadas debajo de travesaños y arcos)

Método de montaje alternativo cuando no hay un marco disponible por encima de la ventana. Utilice sólo si las dimensiones de las persianas son de 17" A x 18" L (con cordón) o 18" A x 18" L (sin cordón) hasta un máximo de 48" A x 72" L.

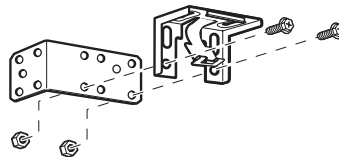

Soportes de sujeción

Ideal para puertas, los soportes de sujeción evitan que la persiana se balancee. Realice el montaje a cada lado del riel inferior como puede verse.

