



## Getting Started — Mounting Type

All of the required installation components are wrapped in the package along with these instructions. Please thoroughly review these instructions before beginning the installation. *Some parts may vary depending upon your selected mounting options or control system options.*

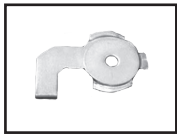


**2 and 3 Way  
Inside/Outside Mount  
Installation Bracket**

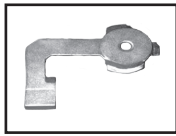


**4 and 4 Way  
Inside/Outside Mount  
Installation Bracket**




**L Bracket  
Outside/Wall Mount**

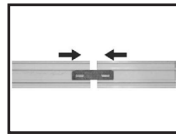

**Track Splice Bracket  
(for tracks over 144" wide)**

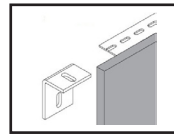

**Installation Bracket  
(Outside Mount Only)  
Slotted Angle Bracket**

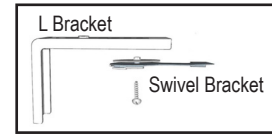

**Outside/Wall Mount  
Bracket Assembly**

If the installation brackets are mounted correctly, the rest of the installation process will follow easily.  
Prior to mounting the brackets, add any clearance depth required to avoid obstructions:

Mounting Depth Requirements					
Number of Track Channels	IM Flush Mount Depth	IM with Valance Flush Mount Depth	IM Minimum Depth	OM Wall Clearance	OM Overall Projection
2	2-1/2"	3-1/2"	1-3/4"	2-1/2" – 3-1/8"	4-1/8" – 4-3/4"
3	2-3/4"	3-3/4"	1-3/4"	2-1/2" – 3-1/8"	4-1/2" – 5-1/4"
4	3-1/2"	4-1/2"	1-3/4"	2-1/2" – 3-1/8"	5-1/4" – 6"
5	3-1/2"	4-1/2"	2"	1-3/4" – 4"	5-1/8" – 7-3/8"


### Fasteners

- #8 screws for wood or aluminum
- Plastic inserts for drywall or plaster
- Auger threaded metal or plastic inserts for drywall
- Molly bolts for drywall
- Toggle bolts for drywall or lath & plaster



**IMPORTANT:** For installation in wood or aluminum frames, it is recommended you use the sheet metal screws included with your custom shades. For other types of wall or window construction you will need to furnish different fasteners.

**Note:** *Fastener strength should be rated more than the weight of the shade.*

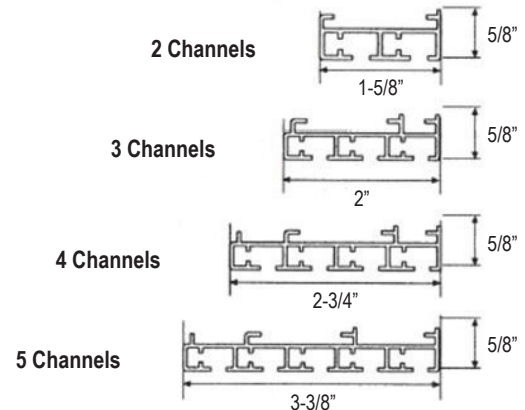

Panel Track hardware installation brackets are either 2 and 3 or 4 and 5 way.  
**Mounting the brackets level is essential to proper operation.**

## Inside or Ceiling Mount



1



2




3

**(1) Mark the bracket location.** Measure 4" from the edge of the window frame (or edge of the track for ceiling) on each side and mark the location. Space the additional installation brackets evenly between the 2 end brackets and mark the location(s). Make sure that the brackets are level with each other. Verify adequate clearance allowance is made for panel operation. **(2) Mount the brackets.** Place the bracket(s) against the top of the window frame (or ceiling) and attach using the provided screw(s). **(3) Attach the track.** Position track in place where it is centered in the window and the operating wand is on the correct side. Hook front of track onto the lip of the bracket and snap back of track into back of bracket.


# INSTALLATION INSTRUCTIONS

## Outside and Wall Mount

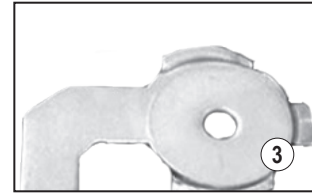


**(1) Mark the bracket location.** Measure 4" from the edge of the window frame (or edge of the track for ceiling) on each side and mark the location. Space the additional installation brackets evenly between the 2 end brackets and mark the location(s). Make sure that the brackets are level with each other. Verify adequate clearance allowance is made for panel operation. **(2) Mount the brackets.** Place the wall-mount bracket(s) assembly against the top of the window frame and attach using the provided screw(s). **(3) Attach the track.** Position track in place where it is centered in the window and the operating wand is on the correct side. Hook front of track onto the lip of the bracket and snap back of track into back of bracket.

## Mounting the Panels

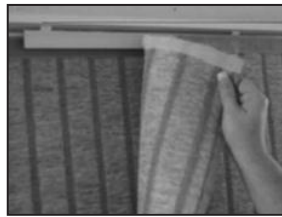


First, unpack each panel and align the Velcro strip on the fabric to the one on the carrier. Then, starting from one end, start pressing the fabric against it until the panel is secured. Repeat this process until all panels are in place.

## Mount the Fabric Valance — INSIDE MOUNT

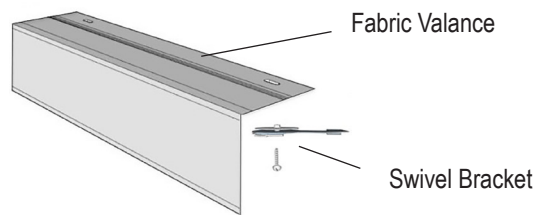

Mount directly with the provided installation screws, drill vertically, with the swivel brackets under the valance, into the top of the window frame.

## Mount the Fabric Valance — OUTSIDE MOUNT

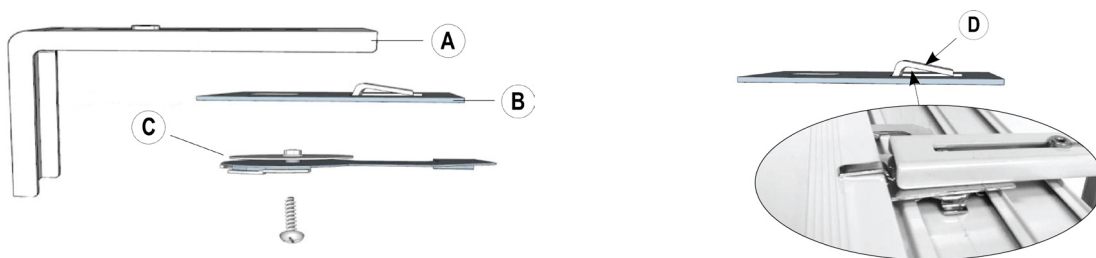

Attach panel track fabric valance bracket (B) and swivel bracket (C) underneath the L bracket (A). Screw all components together. Once panels are installed, slide the valance between the tab (D) on the fabric valance bracket.

# INSTALLATION INSTRUCTIONS

## Operate the Panel Track



**Wand Draw**

Tracks operate with a wand.