CUSTOM

# Wood Blinds


**REAL WOOD | FAUX WOOD**

TECHNICAL GUIDE


LEVOLOR®

20-0048-237
Effective November 2022

# How To Measure Quickly and Accurately

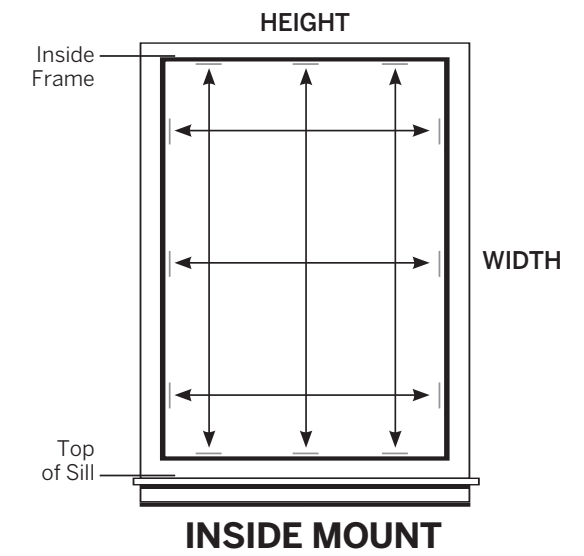


**INSIDE MOUNT**

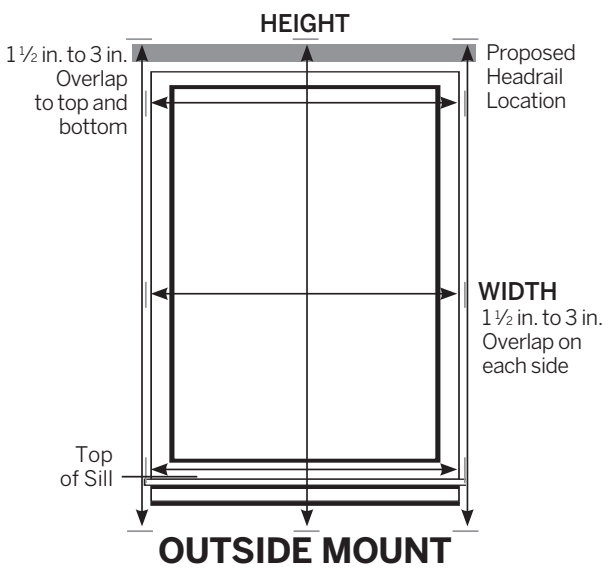


**OUTSIDE MOUNT**

## INSIDE MOUNT (IM) INSTALLATION — For a beautiful framed look

### ❶ MEASURE WIDTH

Measure to the nearest ⅛ in. between inside surfaces of window frame; at the top, middle, and bottom.

Record the narrowest width of the three.

### ❷ MEASURE HEIGHT

Measure to the nearest ⅛ in. from inside surface at top of window to top of sill; at the left, middle, and right.

Record the tallest height of the three.

### ❸ MEASURE DEPTH

Measure exact depth of window casing making note of any obstacles, i.e. handles, tracks, or cranks that could interfere with the blind function.

Use the shortest depth.

## OUTSIDE MOUNT (0M) INSTALLATION — For increased light control and privacy

### ❶ MEASURE WIDTH

Measure to the nearest ⅛ in. between outermost points where blind is to be placed.

Measurement should overlap each side of window frame by at least 1 ½ in.

### ❷ MEASURE HEIGHT

Measure to the nearest ⅛ in. from where top of blind will be located to top of sill, or measure to point of blind reach if no sill.

### HELPFUL HINTS

Always use a metal tape measure as cloth may stretch

Measure your window – not your existing blind or shade

Measure each window separately even if they appear to be identical

Check depth to ensure blind will clear any obstacles and can accommodate headrail if flush mount is desired


If you prefer blind not to touch sill, deduct ¼"

If there is no sill, measure height to point where blind is to reach

**NOTE:** Take all measurements to the nearest ⅛ in. **DO NOT** take any deductions. The factory will make the necessary adjustments to help ensure your window covering operates smoothly.


Visit www.levolor.com/how-to-measure for more measuring information

# Window and Measuring Terminology

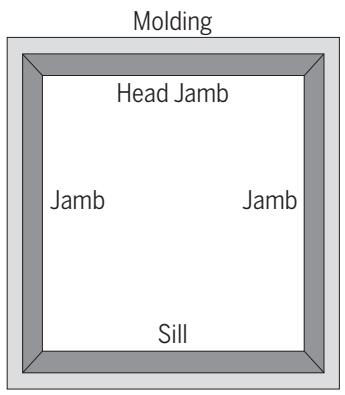



### WINDOW COMPONENTS TERMINOLOGY

- Collectively, the sill and jambs are called the “window casement" or "frame."

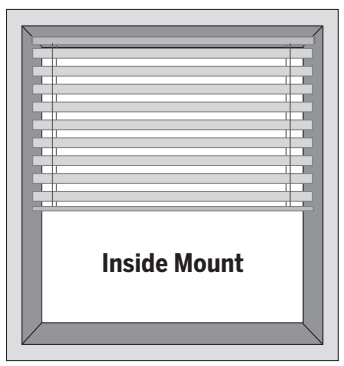



### INSIDE MOUNT

- Blind fits within window opening.
- Great for windows with beautiful trim.

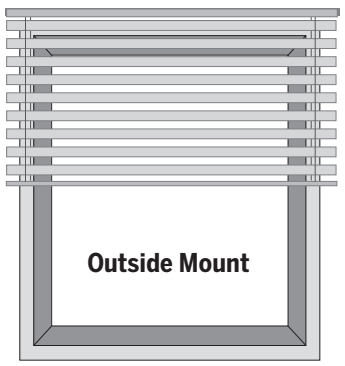


### OUTSIDE MOUNT

- Blind mounts outside window opening.
- Increased light control and privacy.

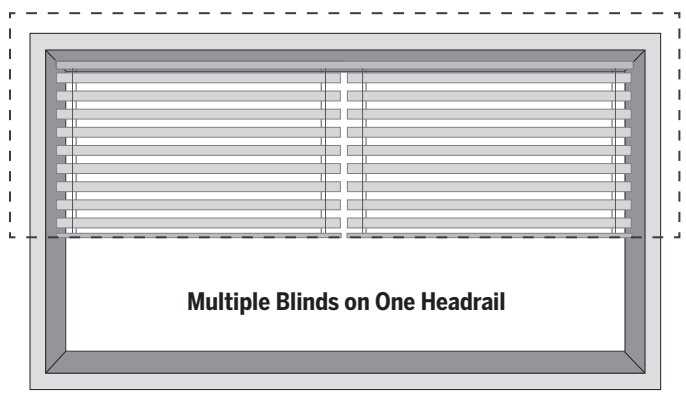



### MULTIPLE BLINDS ON ONE HEADRAIL

- Provides the clean appearance of a single blind with the ability to operate each blind independently.
- Can be mounted inside or outside.
- Can be 2-on-1 or 3-on-1, depending on width of window. 2-on-1 is shown in the image above.

For additional product information visit LEVOLOR.com/woodblinds

# How to Measure Two Blinds on One Headrail

## INSIDE MOUNT (IM) INSTALLATION — For a beautiful framed look

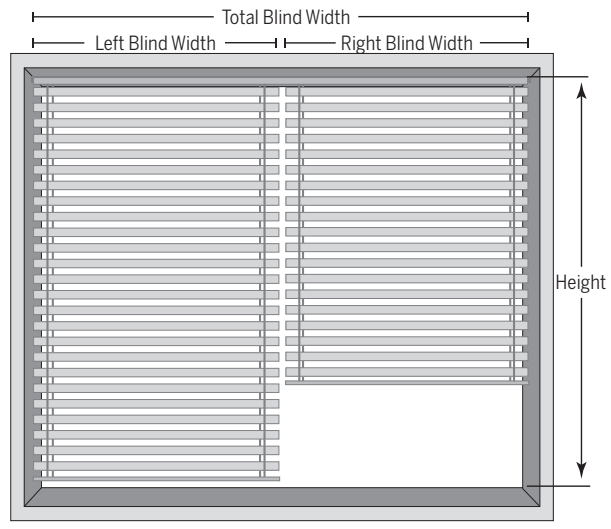


### ❶ MEASURE WIDTH

**Total Blind Width —** Measure to the nearest ⅛ in. between inside surfaces of window frame; at the top, middle, and bottom. **Record the narrowest width of the three.**

**Left Blind Width —** Measure the width that you want the left blind to cover. **Order this blind first when placing your order.**

**Right Blind Width —** Measure the width that you want the right blind to cover.

### ❷ MEASURE HEIGHT

**Overall Blind Height —** Measure to the nearest ⅛ in. from inside surface at top of window to top of sill; at the left, middle and right. **Record the tallest height of the three.**

### ❸ MEASURE DEPTH

Measure exact depth of window casing making note of any obstacles, i.e. handles, tracks, or cranks that could interfere with the blind function. **Use the shortest depth.**

## OUTSIDE MOUNT (0M) INSTALLATION — For increased light control and privacy

### ❶ MEASURE WIDTH

**Overall Blind Width —** Measure to the nearest ⅛ in. between outermost points where blind is to be placed. **Add an additional 3 in. to 6 in. to total width for maximum privacy.**

**Left Blind Width —** Measure the width that you want the left blind to cover. **Order this blind first when placing your order.**


**Right Blind Width —** Measure the width that you want the right blind to cover.

### MEASURE HEIGHT

❷ **Overall Blind Height —** Measure to the nearest ⅛ in. from where top of blind will be located to top of sill, or measure to point of blind reach if no sill.

# How to Measure Three Blinds on One Headrail

## INSIDE MOUNT (IM) INSTALLATION — For a beautiful framed look

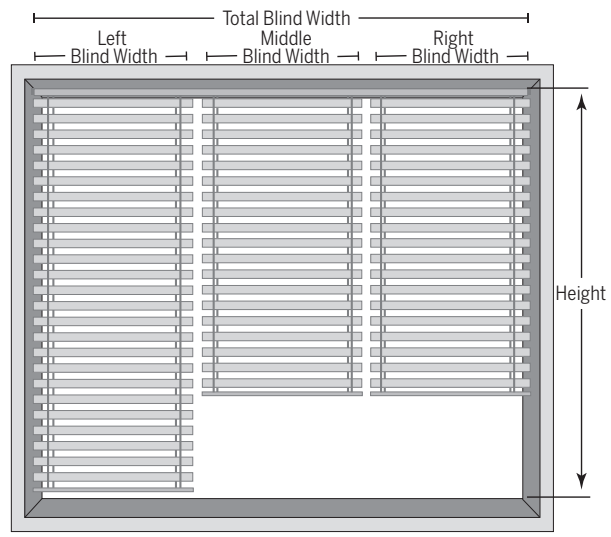


### ❶ MEASURE WIDTH

**Total Blind Width —** Measure to the nearest ⅛ in. between inside surfaces of window frame; at the top, middle, and bottom. **Record the narrowest width of the three.**

**Left Blind Width —** Measure the width that you want the left blind to cover. **Order this blind first when placing your order.**

**Middle Blind Width —** Measure the width that you want the middle blind to cover.

**Right Blind Width —** Measure the width that you want the right blind to cover.

### ❷ MEASURE HEIGHT

**Overall Blind Height —** Measure to the nearest ⅛ in. from inside surface at top of window to top of sill; at the left, middle, and right. **Record the tallest height of the three.**

### ❸ MEASURE DEPTH

Measure exact depth of window casing making note of any obstacles, i.e. handles, tracks, or cranks that could interfere with the blind function. **Use the shortest depth.**

## OUTSIDE MOUNT (0M) INSTALLATION — For increased light control and privacy

### ❶ MEASURE WIDTH

**Overall Blind Width —** Measure to the nearest ⅛ in. between outermost points where blind is to be placed. **Add an additional 3 in. to 6 in. to total width for maximum privacy.**

**Left Blind Width —** Measure the width that you want the left blind to cover. **Order this blind first when placing your order.**

**Middle Blind Width —** Measure the width that you want the middle blind to cover.

**Right Blind Width —** Measure the width that you want the right blind to cover.

### ❷ MEASURE HEIGHT

**Overall Blind Height —** Measure to the nearest ⅛ in. from where top of blind will be located to top of sill, or measure to point of blind reach if no sill.

For Helpful Notes on mounting Multiple Blinds on One Headrail see page 10.

# Product Specifications

Use technical information listed below to assist in product selection.

| Product Performance Comparison | | | |
|---|---|---|---|
| **Category** | **Resistance to Slat Warpage** | **Resistance to UV Fading** | **Lift Weight* (Approx. 36" x 60")** |
| Real Wood | Better | Best | Best (5 lbs) |
| Faux Wood | Best | Better | Better (8.5 lbs) |

* Weight of slats and bottom rail only. This weight does not include valance, headrail, or componentry weight as these are stationary when blind is raised/lowered.

## Number of Cords Comparison:

| Levolor Real Wood | Levolor Faux Wood | Other Faux Wood |
|---|---|---|
| 2.6 avg ladder cords | 3.7 avg ladder cords | 4.5 avg ladder cords |

LEVOLOR Custom Faux Wood uses nearly 1 less ladder per blind than the competition

Benefits of Fewer Cords:

- Cleaner look that allows the beauty of the slat finishes to be the spotlight
- Less obstructed view of the outdoors
- Improved safety

| Light Control Performance Comparison | | |
|---|---|---|
| **Route, Operating System** | **Prior Light Blocking Performance** | **Improved Light Blocking Performance** |
| Privacy, Corded Lift | 3 | 5 |
| Privacy, Cordless Lift | 2 | 3 |
| Standard Route, Corded Lift | 3 | 5 |
| Standard Route, Cordless Lift | 1 | 3 |

Index (Percent Light Blockage): 1 = < 70%, 2 = 70-80%, 3 = 80-90%, 4 = 90-96%, 5 = 96%+

Blinds will not block out 100% of light or achieve complete darkness. Small percentages of light may still pass through slat gaps and/or route holes.



| Stacking Chart – Height Includes Headrail | | | | | | | | | | | | |
|---|---|---|---|---|---|---|---|---|---|---|---|---|
| **Blind Height** | **24"** | **36"** | **42"** | **48"** | **54"** | **60"** | **66"** | **72"** | **84"** | **96"** | **108"** | **120"** |
| 1" Slats | 4 ¾" | 6 ¼" | 7 ¼" | 8" | 8 ¾" | 9 ½" | 10 ¼" | 11" | 12 ¾" | 14 ½" | 16" | 16" |
| 2" Slats | 3 ¾" | 4 ½" | 5" | 5 ½" | 5 ¾" | 6 ¼" | 6 ½" | 6 ¾" | 7 ½" | 8 ¼" | 9" | 10" |
| 2 ½" Slats | 3 ½" | 4" | 4 ½" | 4 ¾" | 5" | 5 ¼" | 5 ½" | 6" | 6 ½" | 7" | 7 ¾" | 8 ¼" |

Note: For Cordless blinds, add 3/8" to the stack height.

| Ladder Spacing and Cord Count Charts | | | | | | |
|---|---|---|---|---|---|---|
| Blind Width — Real Wood | | | | Ladder and Cord Counts | | |
| **Inside Mount Minimum** | **Inside Mount Maximum** | **Outside Mount Minimum** | **Outside Mount Maximum** | **Number of Ladders** | **Number of Standard Cords on Corded Blind** | **Number of Privacy Cords on Corded Blind** |
| 6 ½" | 36 ½" | 6" | 36" | 2 | 2 | 4 |
| 36 ⅝" | 54 ½" | 36 ⅛" | 54" | 3 | 2 | 4 |
| 54 ⅝" | 60 ½" | 54 ⅛" | 60" | 3 | 3 | 6 |
| 60 ⅝" | 84 ½" | 60 ⅛" | 84" | 4 | 4 | 8 |
| 84 ⅝" | 96 ½" | 84 ⅛" | 96" | 5 | 3 | 6 |

| Blind Width — Faux Wood | | | | Ladder and Cord Counts | | |
|---|---|---|---|---|---|---|
| **Inside Mount Minimum** | **Inside Mount Maximum** | **Outside Mount Minimum** | **Outside Mount Maximum** | **Number of Ladders** | **Number of Standard Cords on Corded Blind** | **Number of Privacy Cords on Corded Blind** |
| 7 ¾" | 22" | 7 ¼" | 21 ½" | 2 | 2 | 4 |
| 22 ⅛" | 36 ½" | 21 ⅝" | 36" | 3 | 2 | 4 |
| 36 ⅝" | 51" | 36 ⅛" | 50 ½" | 4 | 4 | 8 |
| 51 ⅛" | 65 ½" | 50 ⅝" | 65" | 5 | 3 | 6 |
| 65 ⅝" | 80" | 65" | 79 ½" | 6 | 4 | 8 |
| 80 ⅛" | 94 ½" | 79 ⅝" | 94" | 7 | 4 | 8 |
| 94 ⅝" | 96 ½" | 94 ⅛" | 96" | 8 | 4 | 8 |

*Privacy not available on 1" Real Wood

For additional product information visit LEVOLOR.com/woodblinds

# Critical Dimensions


To ensure your window covering selection is available and will fit properly, refer to critical dimension information below.

| Standard Factory Adjustments from Ordered Width | | |
|---|---|---|
| DO NOT make any deductions to your measurements | | |
| | Inside Mount | Outside Mount |
| Headrail | -½" | -½" |
| Blind Width | -½" | 0" |
| Classic Value Valance* | -⅛" | +1" |
| Traditional Valance | -⅛" | +1" |
| Transitional Valance | -⅛" | +1" |
| Contemporary Valance | -⅛" | +1" |

*Classic Value Valance available in Faux Wood only

| Headrail and Bottom Rail Dimensions (inches) | | | | | | |
|---|---|---|---|---|---|---|
| Operating System | Headrail | | Corded Bottom Rail | | Cordless Bottom Rail | |
| | Height | Depth | Height | Depth | Height | Depth |
| 2" and 2 ½" Blind | 1 ½" | 2 ¼" | 11/16" | 2" | 1 ⅛" | 2 ¼" |
| 1" Blind | 1" | 1 ½" | 11/16" | 11/16" | N/A | |


| Valance Dimensions | | |
|---|---|---|
| Description | Height | Depth |
| 1" Real Wood Valance | 1 ¾" | ⅜" |
| 2" and 2 ½" Traditional Valance | 3" | 7/16" |
| 2" and 2 ½" Transitional Valance | 3" | ½" |
| 2" and 2 ½" Contemporary Valance | 3" | 7/16" |
| 2" Classic Value Valance | 2 ⅜" | ½" |




1" Contemporary Valance




Traditional Valance



Transitional Valance



Contemporary Valance




Classic Value Valance

| Installation Brackets | | |
|---|---|---|
| Blind Width | End Brackets | Support Brackets* |
| Below 48" | 2 | 0 |
| 48" to 84" | 2 | 1 |
| 84" to 96" | 2 | 2 |
| 96" to 144" | 2 | 3 |


*Support brackets are evenly spaced along length of headrail

| Standard Valance Return Dimensions — Outside Mount | | | |
|---|---|---|---|
| Blind Size | Cordless | Corded / No lift | |
| | | Cord Tilt | Wand Tilt |
| 1" Blind | N/A | N/A | 2 ⅛" |
| 2" Blind | 3 ⅛" | 2 ⅞" | 2 ⅞" |
| 2 ½" Blind | 3 ½" | 3 ¼" | 3 ½" |

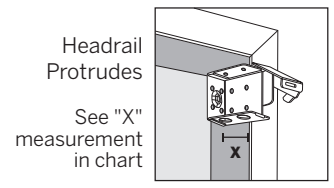



Headrail Protrudes

See "X" measurement in chart

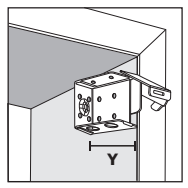



Headrail Flush

See "Y" measurement in chart

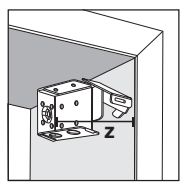


Valance Flush

See "Z" measurement in chart

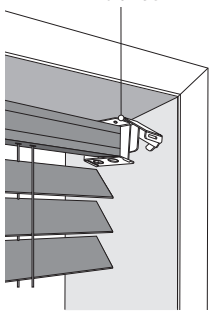

Mounting Box Bracket

| Mounting Depth | | | | | |
|---|---|---|---|---|---|
| | | | Minimum Mounting Surface | | |
| Slat Size | Headrail | | Headrail Protrudes (X) | Headrail Flush (Y) | Valance Flush (Z) |
| | Height | Depth | | | |
| 1" Slat | 1" | 1 ½" | ½" | 1 ¾" | 2 ⅝" |
| 2" Slat | 1 ½" | 2 ¼" | ¾" | 2 ½" | 3 ½"* |
| 2 ½" Slat | 1 ½" | 2 ¼" | 1 ¼" | 3" | 3 ⅞"† |

Headrail Protrudes – clearances necessary for either side, back, or top mount
Valance Flush – for 2" and 2 ½" corded blinds with cord tilt, deduct ¼"
* 3 ⅜" for Classic Value
† With spacer

**VALANCE RETURN DIMENSIONS – INSIDE MOUNT**

- For inside mount installations where headrail protrudes from window casing.
- Returns may be ordered in sizes ranging from ½" to 6".
- Measure to the nearest ⅛" using a metal tape measure.
- If the valance is the same width as the blind, measure from the window trim to the end of the headrail.
- If the valance is wider than the blind and extends over the window trim, measure from the wall to the end of the headrail.

(If you are unable to measure for returns, LEVOLOR recommends a return size of ½" which will work for most situations.)

# Critical Dimensions

## Minimum / Maximum dimensions for Blind configurations

| Single Blind Minimum and Maximum Limitations | | | | |
|---|---|---|---|---|
| **1" Real Wood** | **Minimum Width** | **Maximum Width** | **Minimum Height** | **Maximum Height** |
| Corded - Same Side Lift Control | 18 ½" | 96" | 10" | 120" |
| Corded - Opposite Side Lift Control | 13" | 96" | 10" | 120" |
| Center Tilt, No Lift Control | 8 ¾" | 12 ⅞" | 6" | 120" |
| No Tilt or Lift Control | 6" | 8 ⅝" | 6" | 120" |
| Cordless | N/A | N/A | N/A | N/A |
| Motorization | N/A | N/A | N/A | N/A |
| **2" Real Wood** | **Minimum Width** | **Maximum Width** | **Minimum Height** | **Maximum Height** |
| Corded - Same Side Lift Control | 20 ½" | 96" | 10" | 120" |
| Corded - Opposite Side Lift Control | 11 ½" | 96" | 10" | 120" |
| Corded - Opposite Side Lift Control with Tapes | 13 ¼" | 96" | 10" | 120" |
| Center Tilt, No Lift Control | 9" | 11 ⅜" | 8" | 120" |
| Center Tilt, No Lift Control with Tapes | 9" | 13 ⅛" | 8" | 120" |
| No Tilt or Lift Control | 7 ¼" | 8 ⅞" | 8" | 120" |
| No Tilt or Lift Control with Tapes | 7 ¼" | 8 ⅞" | 8" | 120" |
| Cordless - Standard Slat | 17 ½" | 96" | 10" | 84" |
| Cordless - Privacy Slat | 18 ⅛" | 96" | 10" | 84" |
| Motorization | 23" | 96" | 10" | 120" |
| **2 ½" Real Wood** | **Minimum Width** | **Maximum Width** | **Minimum Height** | **Maximum Height** |
| Corded - Same Side Lift Control | 20 ½" | 84" | 10" | 120" |
| Corded - Opposite Side Lift Control | 11 ½" | 84" | 10" | 120" |
| Corded - Opposite Side Lift Control with Tapes | 13 ¼" | 84" | 10" | 120" |
| Center Tilt, No Lift Control | 9" | 11 ⅜" | 8" | 120" |
| Center Tilt, No Lift Control with Tapes | 9" | 13 ⅛" | 8" | 120" |
| No Tilt or Lift Control | 7 ¼" | 8 ⅞" | 8" | 120" |
| No Tilt or Lift Control with Tapes | 7 ¼" | 8 ⅞" | 8" | 120" |
| Cordless - Standard Slat | 17 ½" | 84" | 10" | 84" |
| Cordless - Privacy Slat | 18 ⅛" | 84" | 10" | 84" |
| Motorization | 23" | 84" | 10" | 120" |
| **2" Faux Wood** | **Minimum Width** | **Maximum Width** | **Minimum Height** | **Maximum Height** |
| Corded - Same Side Lift Control | N/A | N/A | N/A | N/A |
| Corded - Opposite Side Lift Control | 11 ½" | 96" | 10" | 120" |
| Corded - Opposite Side Lift Control with Tapes | 13 ¼" | 96" | 10" | 120" |
| Center Tilt, No Lift Control | 9" | 11 ⅜" | 8" | 120" |
| Center Tilt, No Lift Control with Tapes | 9" | 13 ⅛" | 8" | 120" |
| No Tilt or Lift Control | 7 ¼" | 8 ⅞" | 8" | 120" |
| No Tilt or Lift Control with Tapes | 7 ¼" | 8 ⅞" | 8" | 120" |
| Cordless - Standard Slat | 17 ½" | 96" | 10" | 84" |
| Cordless - Privacy Slat | 18 ⅛" | 96" | 10" | 84" |
| Motorization | 23" | 96" | 10" | 120" |
| **2 ½" Faux Wood** | **Minimum Width** | **Maximum Width** | **Minimum Height** | **Maximum Height** |
| Corded - Same Side Lift Control | N/A | N/A | N/A | N/A |
| Corded - Opposite Side Lift Control | 11 ½" | 96" | 10" | 120" |
| Corded - Opposite Side Lift Control with Tapes | 13 ¼" | 96" | 10" | 120" |
| Center Tilt, No Lift Control | 9" | 11 ⅜" | 8" | 120" |
| Center Tilt, No Lift Control with Tapes | 9" | 13 ⅛" | 8" | 120" |
| No Tilt or Lift Control | 7 ¼" | 8 ⅞" | 8" | 120" |
| No Tilt or Lift Control with Tapes | 7 ¼" | 8 ⅞" | 8" | 120" |
| Cordless - Standard Slat | 17 ½" | 96" | 10" | 84" |
| Cordless - Privacy Slat | 18 ⅛" | 96" | 10" | 84" |
| Motorization | 23" | 96" | 10" | 120" |

*See price grids for exact limitations

| 2-on-1 Blind Minimum and Maximum Limitations | | | | |
|---|---|---|---|---|
| **1" Real Wood** | **Minimum Width** | **Maximum Width** | **Minimum Height** | **Maximum Height** |
| Corded | 27" | 144" | 10" | 120" |
| Cordless | N/A | N/A | N/A | N/A |
| Motorization | N/A | N/A | N/A | N/A |
| **2" Real Wood** | **Minimum Width** | **Maximum Width** | **Minimum Height** | **Maximum Height** |
| Corded | 27" | 144" | 10" | 120" |
| Cordless - Standard Slat | 36 ½" | 144" | 10" | 84" |
| Cordless - Privacy Slat | 37 ¾" | 144" | 10" | 84" |
| Motorization | 36 ½" | 96" | 10" | 120" |
| **2 ½" Real Wood** | **Minimum Width** | **Maximum Width** | **Minimum Height** | **Maximum Height** |
| Corded | 27" | 144" | 10" | 120" |
| Cordless - Standard Slat | 36 ½" | 144" | 10" | 84" |
| Cordless - Privacy Slat | 37 ¾" | 144" | 10" | 84" |
| Motorization | 36 ½" | 96" | 10" | 120" |
| **2" Faux Wood** | **Minimum Width** | **Maximum Width** | **Minimum Height** | **Maximum Height** |
| Corded | 27 | 144" | 10" | 120" |
| Cordless - Standard Slat | 36 ½" | 144" | 10" | 84" |
| Cordless - Privacy Slat | 37 ¾" | 144" | 10" | 84" |
| Motorization | 36 ½" | 96" | 10" | 120" |
| **2 ½" Faux Wood** | **Minimum Width** | **Maximum Width** | **Minimum Height** | **Maximum Height** |
| Corded | 27 | 144" | 10" | 120" |
| Cordless - Standard Slat | 36 ½" | 144" | 10" | 84" |
| Cordless - Privacy Slat | 37 ¾" | 144" | 10" | 84" |
| Motorization | 36 ½" | 96" | 10" | 120" |

2-on-1 blinds with Motorization will feature a single tilt motor. Both blinds will tilt from the same motor and shaft.

| 3-on-1 Blind Minimum and Maximum Limitations | | | | |
|---|---|---|---|---|
| **1" Real Wood** | **Minimum Width** | **Maximum Width** | **Minimum Height** | **Maximum Height** |
| Corded | N/A | N/A | N/A | N/A |
| Cordless | N/A | N/A | N/A | N/A |
| Motorization | N/A | N/A | N/A | N/A |
| **2" Real Wood** | **Minimum Width** | **Maximum Width** | **Minimum Height** | **Maximum Height** |
| Corded | N/A | N/A | N/A | N/A |
| Cordless - Standard Slat | 55" | 144" | 10" | 84" |
| Cordless - Privacy Slat | 56 ⅞" | 144" | 10" | 84" |
| Motorization | N/A | N/A | N/A | N/A |
| **2 ½" Real Wood** | **Minimum Width** | **Maximum Width** | **Minimum Height** | **Maximum Height** |
| Corded | N/A | N/A | N/A | N/A |
| Cordless - Standard Slat | 55" | 144" | 10" | 84" |
| Cordless - Privacy Slat | 56 ⅞" | 144" | 10" | 84" |
| Motorization | N/A | N/A | N/A | N/A |
| **2" Faux Wood** | **Minimum Width** | **Maximum Width** | **Minimum Height** | **Maximum Height** |
| Corded | N/A | N/A | N/A | N/A |
| Cordless - Standard Slat | 55" | 144" | 10" | 84" |
| Cordless - Privacy Slat | 56 ⅞" | 144" | 10" | 84" |
| Motorization | N/A | N/A | N/A | N/A |
| **2 ½" Faux Wood** | **Minimum Width** | **Maximum Width** | **Minimum Height** | **Maximum Height** |
| Corded | N/A | N/A | N/A | N/A |
| Cordless - Standard Slat | 55" | 144" | 10" | 84" |
| Cordless - Privacy Slat | 56 ⅞" | 144" | 10" | 84" |
| Motorization | N/A | N/A | N/A | N/A |

Note: Maximum height for blinds 132"-144" wide is 108"
All 3-on-1 blinds must be Cordless.
All 2-on-1 and 3-on-1 Minimum widths are Inside Mountmeasurements.

| Motorized Maximum Square Feet | |
|---|---|
| 2" Real Wood | 50 square feet |
| 2 ½" Real Wood | 45 square feet |
| 2" Faux Wood | 45 square feet |
| 2 ½" Faux Wood | 36 square feet |



*See price grids for exact limitations

# REAL AND FAUX WOOD PRODUCT DETAILS AND FINISH INDEX

## REAL WOOD PRODUCT DETAILS

- Premium hardwood delivers a beautiful finish and exceptional light control.
- Rich, natural wood enhances your style while protecting flooring and furniture from fading.
- Available in 1", 2", and 2 ½" slats.
- The natural characteristics of wood provide for uniquely beautiful blinds.
- Variations in color and grain are inherent to real wood, thus slats may be slightly darker or lighter than shown in the sample books.
- Variations in color in no way compromise the quality of the blinds.

## FAUX WOOD PRODUCT DETAILS

- Our unique NuWood™ material ensures the highest quality at an incredible value.
- NuWood resists warping, cracking, and fading over the full life of the product.
- Available in 2" and 2 ½" slats.

| Real Wood Finish Index | | | |
|---|---|---|---|
| **Finish Name** | **1" Real Wood** | **2" Real Wood** | **2½" Real Wood** |
| Almost White | 11002321 | 12002321 | 12502321 |
| American Walnut | N/A | 120DS005 | N/A |
| Brandy | 11081338 | 12081338 | 12581338 |
| Bright White* | N/A | 120WH056 | N/A |
| Chalk Gray | N/A | 120GY048 | N/A |
| Chenille | N/A | 12078027 | N/A |
| Cherry | N/A | 120MS001 | N/A |
| Chestnut | 11002777 | 12002777 | 12502777 |
| Cinnamon | 11081341 | 12081341 | 12581341 |
| Colonial Mahogany | 110DS003 | 120DS003 | 125DS003 |
| Colonial Pine | 11078082 | 12078082 | 12578082 |
| Dover | 11081019 | 12081019 | 12581019 |
| English Walnut | N/A | 12002772 | N/A |
| Espresso | 110DS001 | 120DS001 | 125DS001 |
| Estate Autumn | N/A | 12002897 | N/A |
| Estate Gray | N/A | 120GY047 | N/A |
| Estate Oak | N/A | 12002888 | N/A |
| French Roast | N/A | 12081340 | N/A |
| Golden Oak | 11002771 | 12002771 | 12502771 |
| Harvest Oak | N/A | 120MS006 | N/A |
| Hickory | N/A | 12078097 | N/A |
| High Gloss Golden Oak | N/A | 12002352 | N/A |
| Maple | N/A | 120LS006 | N/A |
| Matte Black | N/A | 120BK009 | N/A |
| Nordic Oak | N/A | 120LS009 | N/A |
| Reclaimed Split | N/A | 120DS004 | N/A |
| Rosewood | N/A | 120RE009 | N/A |
| Sandblasted Dover | N/A | 12081089 | N/A |
| Sandblasted Warm White | N/A | 12002909 | N/A |
| Warm Oak | N/A | 120MS008 | N/A |
| Warm White | 11002908 | 12002908 | 12502908 |

* Finish recommended for consumers looking to match the color of their blinds to white window trim. This tone of white coordinates with the most widely used contractor grade white paint.

| Faux Wood Finish Index | | |
|---|---|---|
| **Finish Name** | **2" Faux Wood** | **2½" Faux Wood** |
| Aged White | 120WH055 | 125WH055 |
| Almost White | 12067100 | 12567100 |
| Chenille | 120BE014 | 125BE014 |
| Cherry | 120RE007 | N/A |
| Colonial Mahogany | 120RE008 | N/A |
| Colonial Pine | 12067405 | N/A |
| Cool White | 120WH051 | N/A |
| Dover | 12067160 | N/A |
| Espresso | 120DS007 | 125DS007 |
| Golden Oak | 12067217 | 12567217 |
| Hickory | 12067410 | N/A |
| Light Gray | 120GY046* | 125GY046 |
| Pecan | 120BR036* | 125BR036 |
| Sandblasted Cool White | 120WH052 | N/A |
| Sandblasted Dover | 12067371 | N/A |
| Sandblasted Warm White | 12067265 | N/A |
| Sandblasted White† | 120WH054* | 125WH054 |
| Summer Wheat | 120YW007 | N/A |
| Walnut | 120BR035* | 125BR035 |
| Warm White | 12067130* | N/A |
| White† | 120WH053* | 125WH053 |

*Color available in 2" Classic Value Faux Wood

† Finish recommended for consumers looking to match the color of their blinds to white window trim. This tone of white coordinates with the most widely used contractor grade white paint.

# OPTIONS AVAILABILITY

| Available Options | | | | | | |
|---|---|---|---|---|---|---|
| **S** = Standard Option **O** = Free Option **U** = Upgrade **N/A** = Not Available | | | | | | |
| **Category** | **1" Real Wood** | **2" Real Wood** | **2 ½" Real Wood** | **2" Faux Wood** | **2 ½" Faux Wood** | **2" Classic Value Faux Wood** |
| Cordless | N/A | U | U | U | U | U |
| Motorization | N/A | U | U | U | U | N/A |
| Privacy Route | N/A | U | U | U | U | U |
| Wand Tilt | S | S | S | S | S | S |
| Cord Tilt | N/A | O | O | O | O | O |
| Decorative Tapes | N/A | U | U | U | U | U |
| Traditional Style Package | N/A | O | O | O | O | N/A |
| Transitional Style Package | N/A | O | O | O | O | N/A |
| Contemporary Style Package | S | O | O | O | O | N/A |
| Classic Value Style Package | N/A | N/A | N/A | N/A | N/A | S |

## STANDARD AND FREE OPTIONS

### CHOICE OF STYLE PACKAGE

Select from three packages that best fits the style of your room. Style packages include a decorative valance, tassels (for corded products), and/or wand handles (for wand tilt and cordless products).

Available on 2" and 2 ½" blinds only. Not available for 1" Real Wood or Classic Value Faux Wood.

Traditional – An established look with sharp lines and fine details

Transitional – A symmetric aesthetic with clean, balanced lines


Contemporary – softened curves and sweeping lines

### STANDARD STYLE PACKAGES

1" Real Wood – only available with 1 ¾" Contemporary valance, 1" bottom rail, and wand tilt.

Classic Value Faux Wood – only available with Classic Value valance, tassels, and bottom rail. Wand handle not available on Classic Value.


| Style Packages Available by Price Group | | | | |
|---|---|---|---|---|
| **S** = Standard Option **O** = Free Option **N/A** = Not Available | | | | |
| **Price Group** | **Traditional** | **Transitional** | **Contemporary** | **Classic Value** |
| A - 2" Classic Value Faux Wood | N/A | N/A | N/A | S |
| B - 2" Faux Wood | O | O | O | N/A |
| C - 2" Faux Wood | O | O | O | N/A |
| D - 2 ½" Faux Wood | O | O | O | N/A |
| E - 2" Real Wood | O | O | O | N/A |
| F - 2 ½" Faux Wood | O | O | O | N/A |
| G - 1" Real Wood | N/A | N/A | S | N/A |
| H - 2" Real Wood | O | O | O | N/A |
| I - 2" Real Wood | O | O | O | N/A |
| J - 2 ½" Real Wood | O | O | O | N/A |
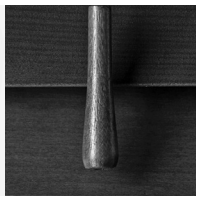
| | Valance | Tassel & Wand |
|---|---|---|
| Traditional |  |  |
| Transitional |  |  |
| Contemporary |  |  |
| Classic Value |  |  |

# OPTIONS AVAILABILITY


## EXTENSION BRACKETS

For installation requiring additional space between the blind and the mounting surface.

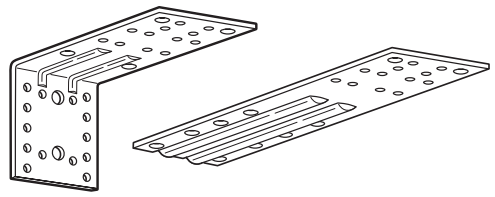

## HOLD-DOWN BRACKETS

Hold-down brackets prevent blinds from swaying. They can be sill mounted, face mounted, or mounted inside the frame. Recommended for French doors and windows subject to wind exposure. Must be requested at time of order.

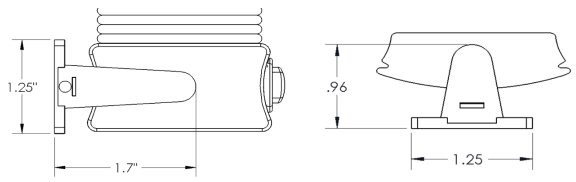


## CONTROL OPTIONS AND POSITIONING

Choice of control position is available. Tilt control left and lift control right is standard position. You may choose to reverse the standard position. Grouped controls, both tilt and lift controls on the same side, are available on Real Wood only.

### WAND TILT

Wand tilt is the default tilt control and standard on 1" Real Wood and cordless blinds.

### CORD TILT

Available in place of wand tilt. Operating cords will have a default length of 40% of the blind height for added child safety and to reduce the chance of accidental strangulation. Operating cords may be changed to customized length when required to ensure user accessibility. Not available on cordless.



Wand Tilt



Cord Tilt

# UPGRADES

## PRIVACY ROUTE

Edge route design provides tighter closure to minimize light for increased privacy and security. Slats can easily be removed for cleaning. Not available on 1" blinds or blinds with Decorative Tapes.




Privacy Slat



Standard Slat

## CORDLESS CONTROL

The design of our cordless operating system creates a clean profile across all of your windows and makes it easy to lift and lower your blinds without dangling cords. Not available on 1" Real Wood. The functional LEVOLOR button smoothly raises and lowers your blinds when pressed and locks the blinds in position when released.

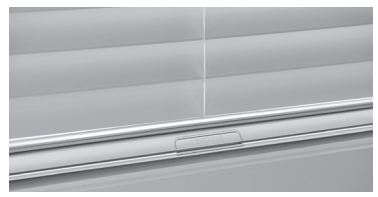


# MOTORIZATION

**LEVOLOR® InMotion™**

Experience motorization like never before with smart home integration and automated scheduling.

- Powered by an integrated, rechargeable lithium-ion battery.
- Recharge with included magnetic micro-USB charger.
- Control shades with the 15-channel remote (sold separately).
- Add the hub (sold separately) to sync with Wi-Fi to enable app control and smart home integration. Links with Amazon Alexa, Google Home, IFTTT, Samsung SmartThings, and Siri.
- See real-time shade position and battery charge status.
- Store preset shade positions as scenes. Create routines by scheduling scenes by day of week and time of day.
- Use the app to adjust shades from anywhere.
- App available to download for iOS and Android devices.
- Not available with Classic Value Faux Wood or 1" Real Wood.

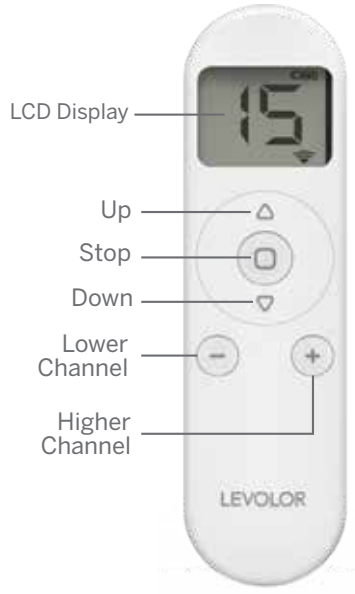


**Remote**
Requires 2 x AAA batteries, included.

**App Requirements:**
- LEVOLOR Hub
- 2.4 GHz Wi-Fi Network
- Apple® iOS 10.0 or newer
- Android™ 6.0 or newer




**Hub**
Requires 5V 2A adapter, included.
Connect up to 30 shades per hub.




**App**
Phone sold separately.

NOTE: LEVOLOR® InMotion™ is not compatible with products from the previous LEVOLOR® motorization program. This includes blinds/shades that are controlled with the previous LEVOLOR app, 3-channel remote, and 6-channel remote.


**Visit LEVOLOR.com/InMotion for additional information.**

LEVOLOR Customer Service — 800-538-6567

# OPTIONS AVAILABILITY


## CUT OUTS

Allows access to air conditioners, window cranks, etc. Side cutouts are available. A diagram may be required. Not available with cordless control.

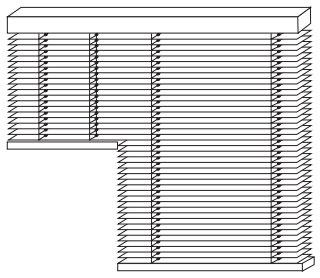

## REPLACEMENT VALANCE OPTION

Maximum total valance width is 144". Valances greater than 96" will be spliced.

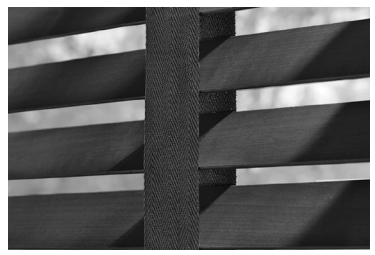

## MULTIPLE BLINDS ON ONE HEADRAIL

Provides the flexibility of raising one blind while keeping the other lowered. Two or three blinds on one headrail are available up to a total maximum width of 144". Innerspace is ½" between blinds. Horizontal slat alignment not guaranteed.



**MULTIPLE BLINDS ON ONE HEADRAIL HELPFUL NOTES:**

- Available up to a total maximum width of 144"
- Each blind operated independently
- There will be inner spacing between slats of individual blinds to operate independently
- Inner spacing between blinds is ½ in.
- Left Blind tilt controls are on the left side and Right Blind tilt controls are on the right side for 2-on-1 cordless blinds
- All 3-on-1 Blinds will be Cordless
- Always use a metal tape measure as cloth may stretch
- Take all measurements to the nearest ⅛ in. DO NOT take any deductions
- The factory will make any necessary adjustments to help ensure your blind operates smoothly
- Horizontal slat alignment is not guaranteed

## DECORATIVE TAPES

Our decorative twill tapes are sampled in suggested pairings that coordinate with light, medium, and dark colored slats. Select from our recommendations or choose from eleven (11) solid and four (4) patterned tapes to accent your blinds and coordinate with your upholstery and textiles.

| Decorative Tapes* | |
|---|---|
| Solid – 1 ½" Wide | |
| **Color Name** | **Color Number** |
| Black | 00890 |
| Blush | WH005 |
| Bordeaux | 00755 |
| Harvest | 00301 |
| Mink | 00138 |
| Mist | GY003 |
| Mocha | 00378 |
| Smoked Gray | GY002 |
| Snow | 00110 |
| Suntan | 00352 |
| Whisper | 00140 |
| Pattern – 1 ½" Wide | |
| Modern Scroll Mink | BR002 |
| Modern Scroll Sand | NU008 |
| Nantucket Stripe Mink | 01237 |
| White Scroll | 01201 |

* Not available on 1" Real Wood, Cordless, or Privacy Route blinds.

# Cleaning and Care

Keep your LEVOLOR Real and Faux Wood blinds looking their best by periodically wiping them with a soft cloth, a duster, or the brush attachment from a vacuum cleaner.

**Note**: Improper cleaning may void warranty

- You can clean the blind hanging in place or you can take it down.
- By tilting the slats down, but not quite closed, you will be able to clean most of the top surface of each slat.
- **Do not use water, solvents, or abrasive solutions to clean the blind.** This will cause damage to the blind which is not covered under warranty.
- **Real Wood Blinds:** In very dusty environments, you may use a non-wax furniture polish to clean the blind.
- **Faux Wood Blinds:** You may use a soft, lightly dampened cloth to clean your NuWood blinds.
- **Blinds with Privacy Route:** Slats can be removed for cleaning. Slide out the slat, wipe clean, and return to its original position. If a light gap occurs for any reason, simply flip the slat over to cover or close the gap.

**The following information, listed below, is available online at LEVOLOR.com**


- Terms and Conditions
- Freight
- Warning and Safety Information
- Order Processing
- Claims and Returns
- Warranty


For additional product information visit LEVOLOR.com/woodblinds

# PARTS AND COMPONENTS

| 2" and 2 ½" Real & Faux Wood Blinds | | |
|---|---|---|
| Part Description | | Part Number |
| 1 | Installation Brackets | Varies by Color |
| 2 | Center Support Bracket | 1851792 |
| 3 | Extension Bracket - 2" | L01X200000010 |
| 4 | Extension Bracket - 4" | L02X400000010 |
| 5 | Hold Down Brackets – 2" and 2 ½" | DWL01893 / HBHD0004 |
| 8, 9, 10 | Wand Handle | Varies by Color |
| 11 | Wand Sleeve | K11B280000091 |
| 12 | Valance Clip - Corded Tilt | HFCP0002 |
| 6 | Valance Clip - Wand Tilt | 1836002 |
| 7 | Valance Clip - Motorized | 1032944 |
| 13 | 2" Slat Clip | W22T0000 |
| 14 | 2 ½" Slat Clip - Top / Bottom | W14S2500 / 1006500 |
| 15, 16, 17 | Valance Returns | Varies by Color |
| 18 | Cordless Bottom Rail End Cap | Varies by Color |
| 19 | Cord Cleat | 1921947 / 1921948 |
| 20 | Remote Control Kit (optional) | 1029591 |
| 21 | Motorized Battery Pack | 62203400 |
| 29 | 10' Micro-USB Charging Cable | 62206300 |
| 30 | Power Adapter | 62200000 |
| 31 | 1' Magnetic Charging Adapter | 62206100 |
| 32 | Battery Clip – Motorized | 1032943 |
| 33 | Hub (optional) | 1029593 |
| 34 | Magnetic Insert | 62206200 |

| 1" Real Wood Blinds | | |
|---|---|---|
| Part Description | | Part Number |
| 22 | Installation Brackets | Varies by Color |
| 23 | Center Support Bracket | DJL0606600050 |
| 24 | Extension Bracket - 2" | K01X200000010 |
| 25 | Extension Bracket - 4" | K02X400000010 |
| 26 | Cordless / Corded Hold Down Brackets | 1006501 / KIT2009 |
| 8 | Wand Handle | Varies by Color |
| 11 | Wand Sleeve | K11B280000091 |
| 27 | Valance Clip | 1870058 |
| 28 | Valance Returns | Varies by Color |

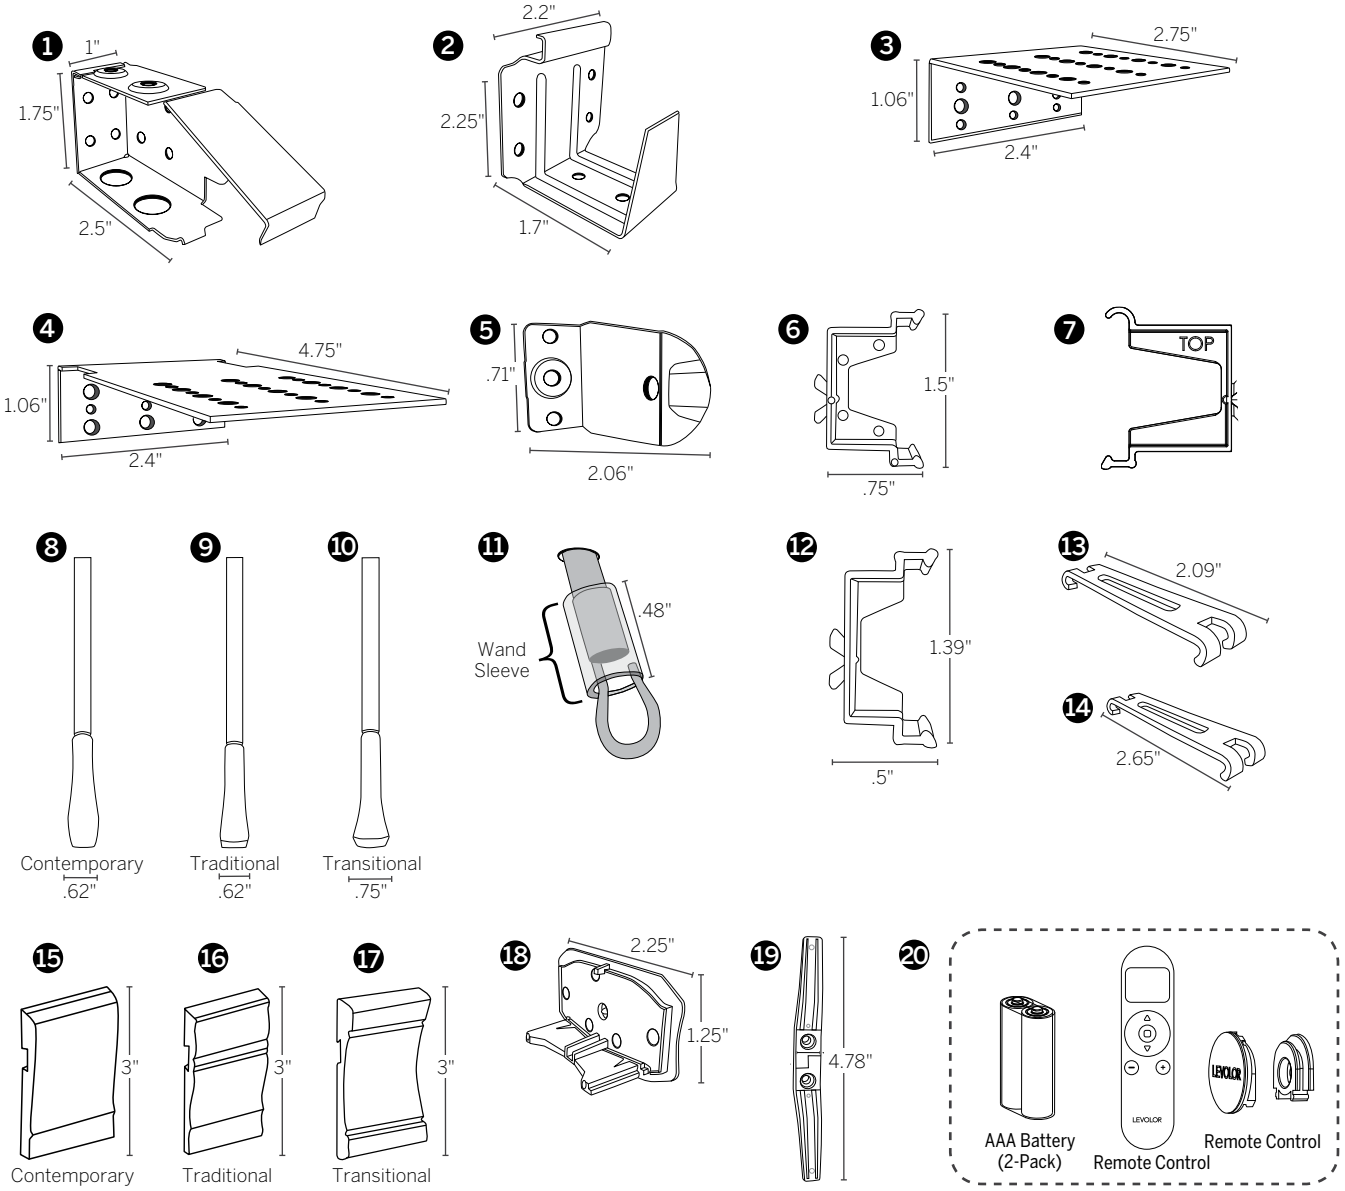

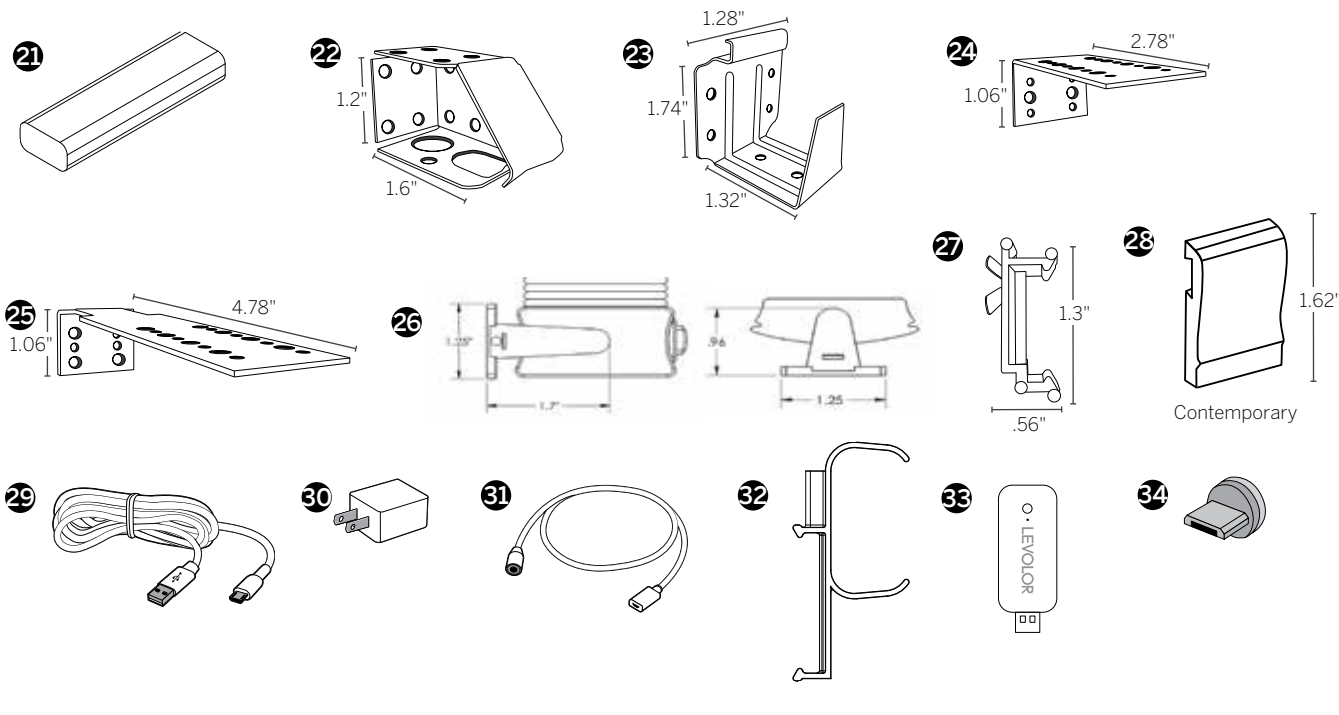


© 2022 LEVOLOR®, Inc.

U.S. TECH GUIDE – Outer Cover